


'50s TELECASTER[®], 013-1202

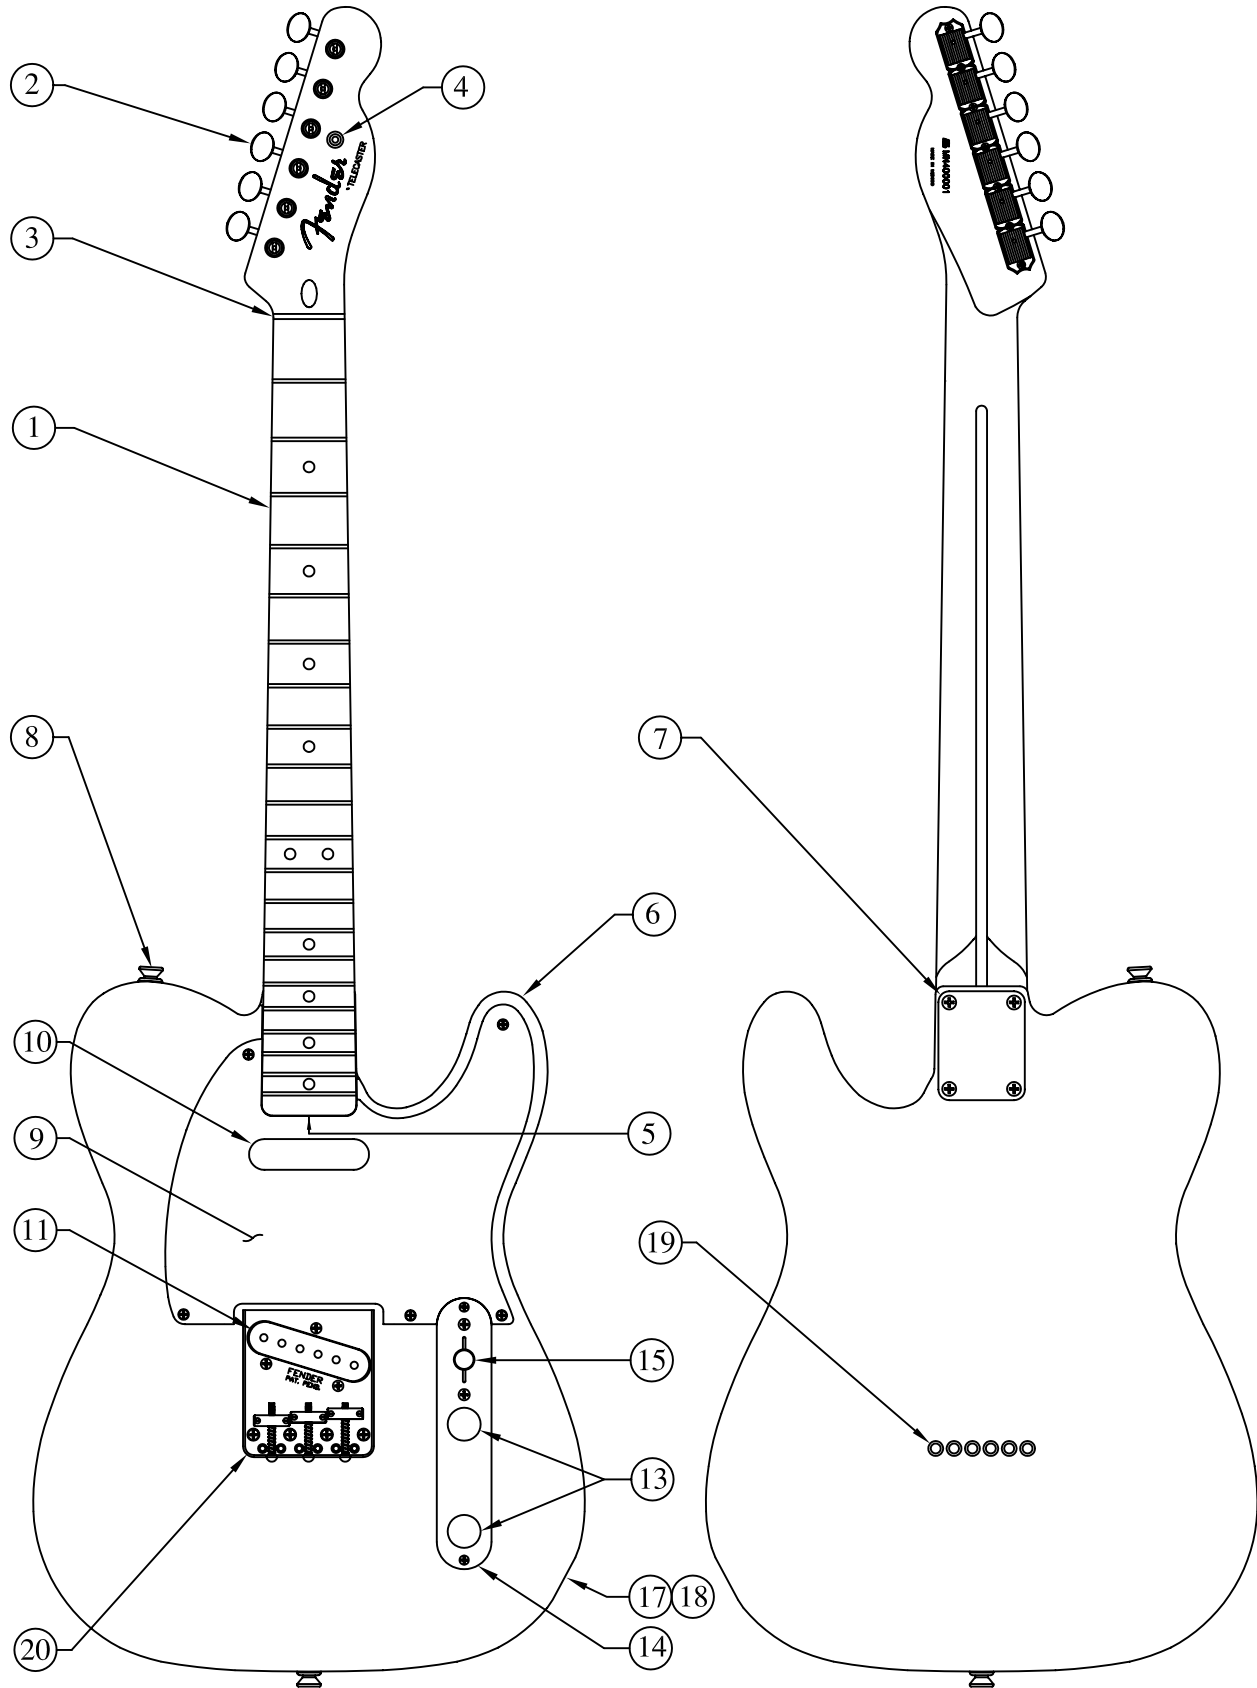

Fender[®]

'50s TELECASTER[®], 013-1202

REF.#	P/N	DESCRIPTION
1	0054160000	Neck, 50's Tele M/N
2	0047912000	Tuning Key, (1) Set
	0053020000	Bushing, Key
	0011357000	Mounting Screw
3	0083675000	Bone Nut
4	0018365000	String Retainer
	0015578000	Mounting Screw
5	0012252000	Truss Rod Adjustment Nut
6	See Chart	Body, 50's Telecaster, Ash
7	0018353000	Neck Mounting Plate
	0015636000	Mounting Screw
8	0012344000	Strap Button
	0015610000	Mounting Screw
9	0051514002	Pickguard, Tele, White
	0015578000	Mounting Screw
10	0053678000	Pickup, Rhythm
	0016295000	Mounting Screw
	0039410000	Tubing, Latex Cut
11	0055216000	Pickup, Lead
	0048631000	Mounting Screw
	0063398000	Tubing, Latex Cut
12	0019064000	Control, 250k (2)
	0016352000	Mounting Hex Nut
	0016436000	Washer, Lock Intl.
13	0018357000	Knob, Knurled Chrome (2)
	0028897001	Screw Set (2)
14	0033134000	Plate, Control
	0015578000	Mounting Screw
15	0053290000	Switch, Lever 3-Position
	0018359000	Knob, Black
	0021417000	Mounting Screw
16	0015552000	Capacitor, .05uF
17	0047329000	Output Jack
	0016352000	Mounting Hex Nut
	0016436000	Washer, Lock Intl.
18	0021452000	Ferrule, Jack
19	0012112000	String Retainer, Ferrule
20	0054163000	Bridge Assy, Tele Vintage
	0016188000	Mounting Screw
21	0054162000	Bridge Plate, Tele Vintage
22	0053688000	Bridge Section, S.S. (3)
23	0015834000	Intonation Screw, NI, (3)
	0018689000	Intonation Spring, 1-3
24	0016105000	Height Adjust Screw, NI, (6)


BODY CHART

P/N	COLOR
0054161503	2 TONE SUNBURST
0054161501	BLONDE.
0054161506	BLACK




'50s TELECASTER[®], 013-1202

WIRING DIAGRAM

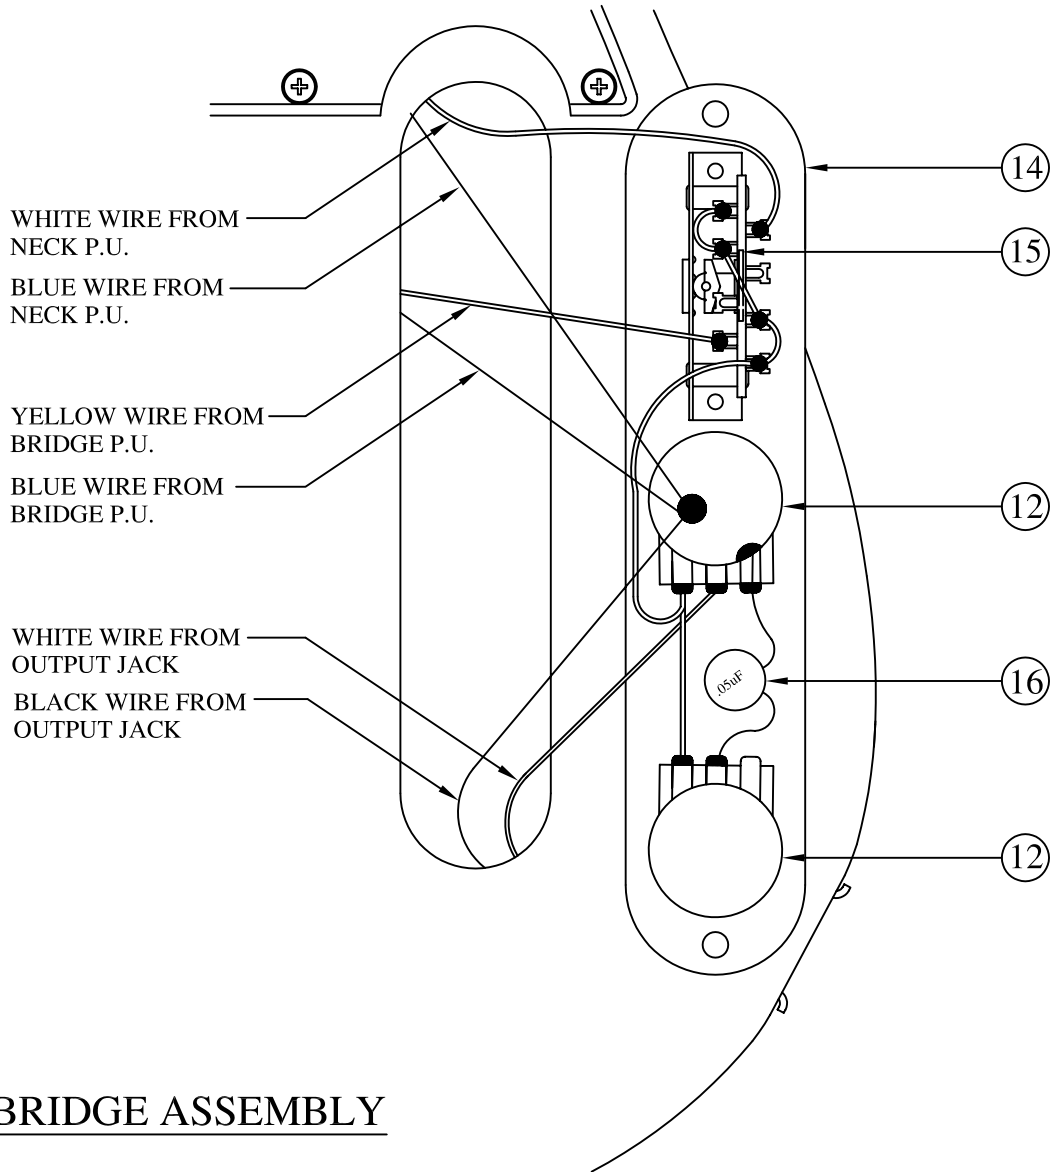
 
 



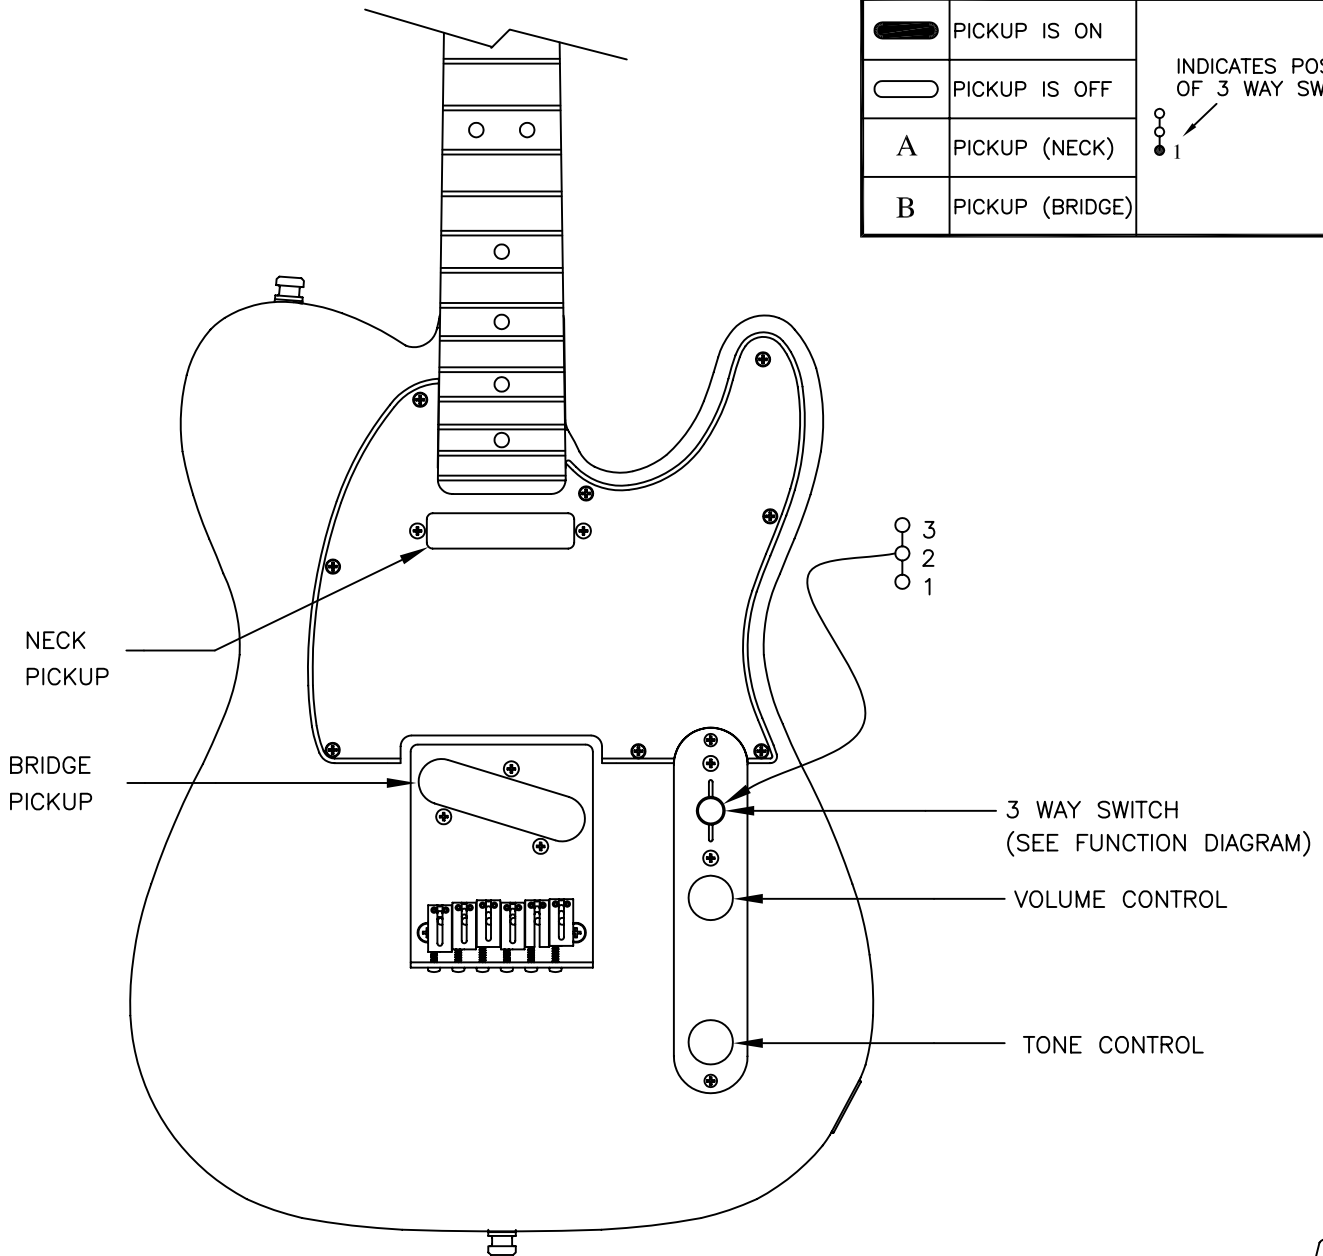
BRIDGE ASSEMBLY

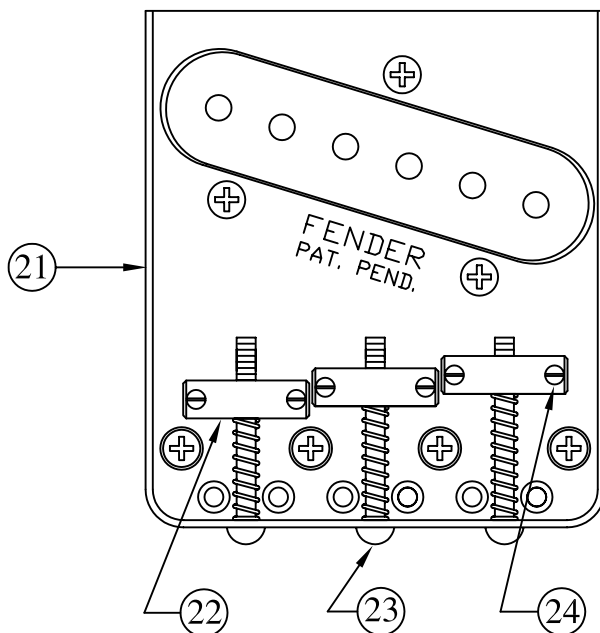

Fender[®]

'50s TELECASTER[®], 013-1202

3 WAY SWITCH POSITION			
 3	 2	 1	
			← NECK PICKUP (A)
			← BRIDGE PICKUP (B)
	PICKUP IS ON		INDICATES POSITION OF 3 WAY SWITCH
	PICKUP IS OFF		
A	PICKUP (NECK)		 1
B	PICKUP (BRIDGE)		



Fender[®]