


CLASSIC PLAYER BAJA TELECASTER[®], 014-1502

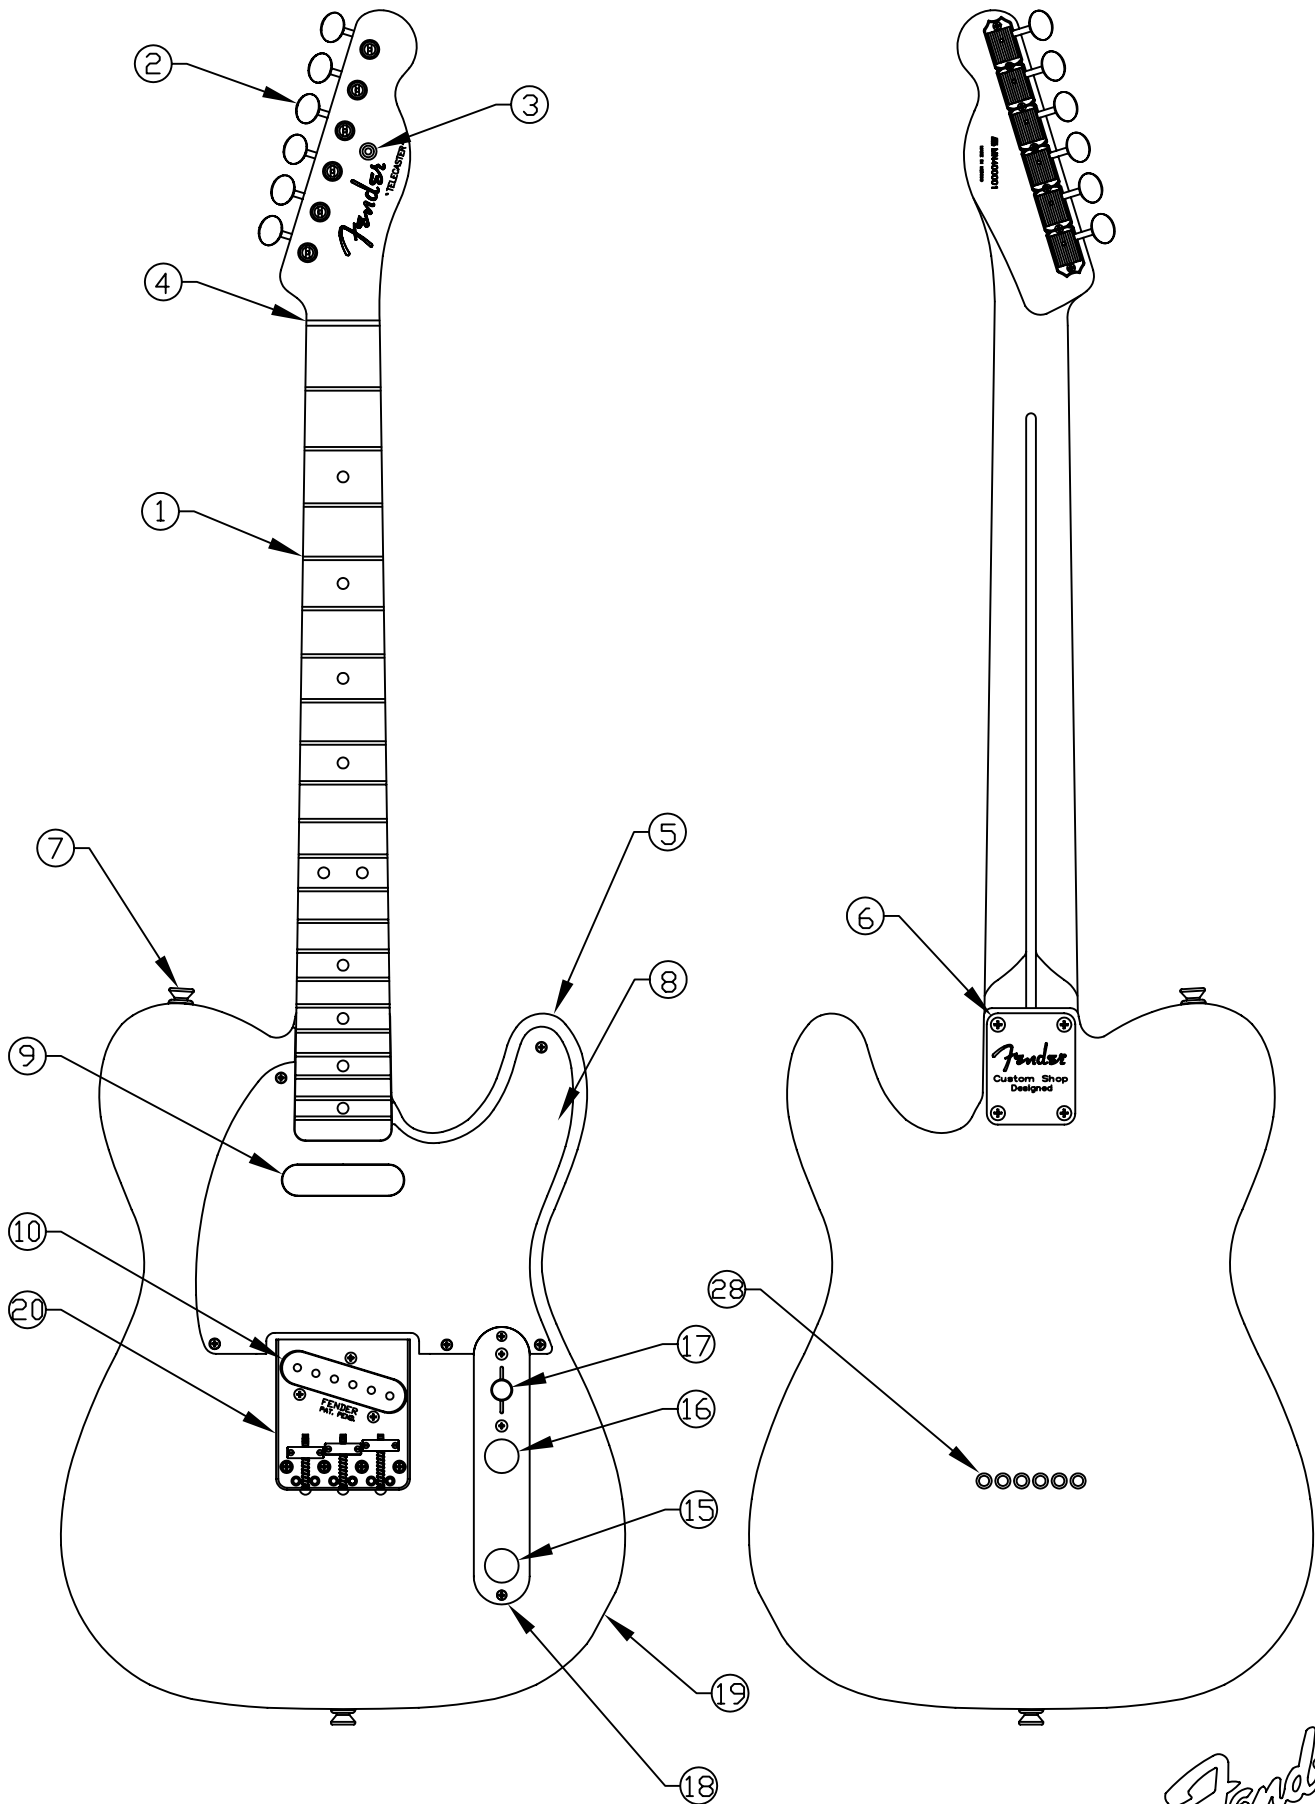

Fender[®]

CLASSIC PLAYER BAJA TELECASTER[®], 014-1502



REF.#	P/N	DESCRIPTION
1	0072244000	Neck, Classic Player Tele, MN
2	0047912000	Tuning Key, Key Set Vintage, Ping
	0053020000	Bushing Key Vintage, Ping
	0011357000	Mounting Screw
3	0018365000	String Guide Vintage Tele
	0015578000	Mounting Screw
4	0083675000	Bone Nut
5	See Chart	Body, Tele Vintage
6	0072246000	Neck Mounting Plate, Custom Shop Design
	0015636000	Mounting Screw
7	0012344000	Strap Button
	0015610000	Mounting Screw
8	See Chart	Pickguard, Tele Vintage
	0015578000	Mounting Screw
9	0072267000	Pickup, Twisted Tele. Neck
	0016295000	Mounting Screw
	0039410000	Latex Tubing
10	0072268000	Pickup, Vintage Tele. Bridge
	0048631000	Mounting Screw
	0063398000	Latex Tubing
11	0061260000	S-1 Switch/Pot Control, Volume
	0054504000	Capacitor, .01 μ F 10%
	0016352000	Mounting Nut
	0016436000	Lock Washer
12	0019064000	Control 250K, Tune
	0016352000	Mounting Nut
	0016436000	Lock Washer
13	0015552000	Capacitor, .05 μ F 100V 20%
14	0058137000	Switch, 4-Way Toggle
	0021417000	Mounting Screw
15	0013359000	Knob, Control Tele, Tune
	0028897001	Mounting Set Screw
16	0059272000	Switch Knob, Tele, Volume
	0059270000	Switch Cap, Tele
	0059278000	Coupling Sleeve Sosh Nylon
	0028897001	Mounting Set Screw
17	0018359000	Knob, Switch Vintage Tele
18	0033134060	Control Plate, Telecaster
	0015578000	Mounting Screw
19	0037428000	Output Jack
	0016436000	Lock Washer
	0016352000	Mounting Hex Nut
	0021452000	Jack Ferrule
	0010355060	Retainer
20	0072249000	Bridge Assembly, Classics Player Tele
	0016188000	Mounting Screw
	0018531000	Bridge Adjustment wrench
21	0054162000	Bridge Plate
22	0018360000	Bridge Section, (3)
23	0015834000	Intonation Screw, (3)
24	0018689000	Intonation Spring, (3)
25	0016105000	Height Adjustment Screw, (6)
28	0012112000	String Retainer

BODY		PICKGUARD	
P/N	COLOR	P/N	COLOR
0073026507	Vintage Blonde	0072980002	Black
0073026589	Desert Sand	0072247000	Parch




CLASSIC PLAYER BAJA TELECASTER® , 014-1502

WIRING DIAGRAM

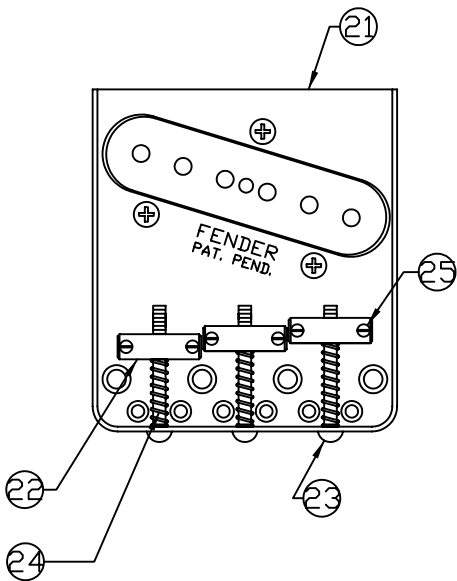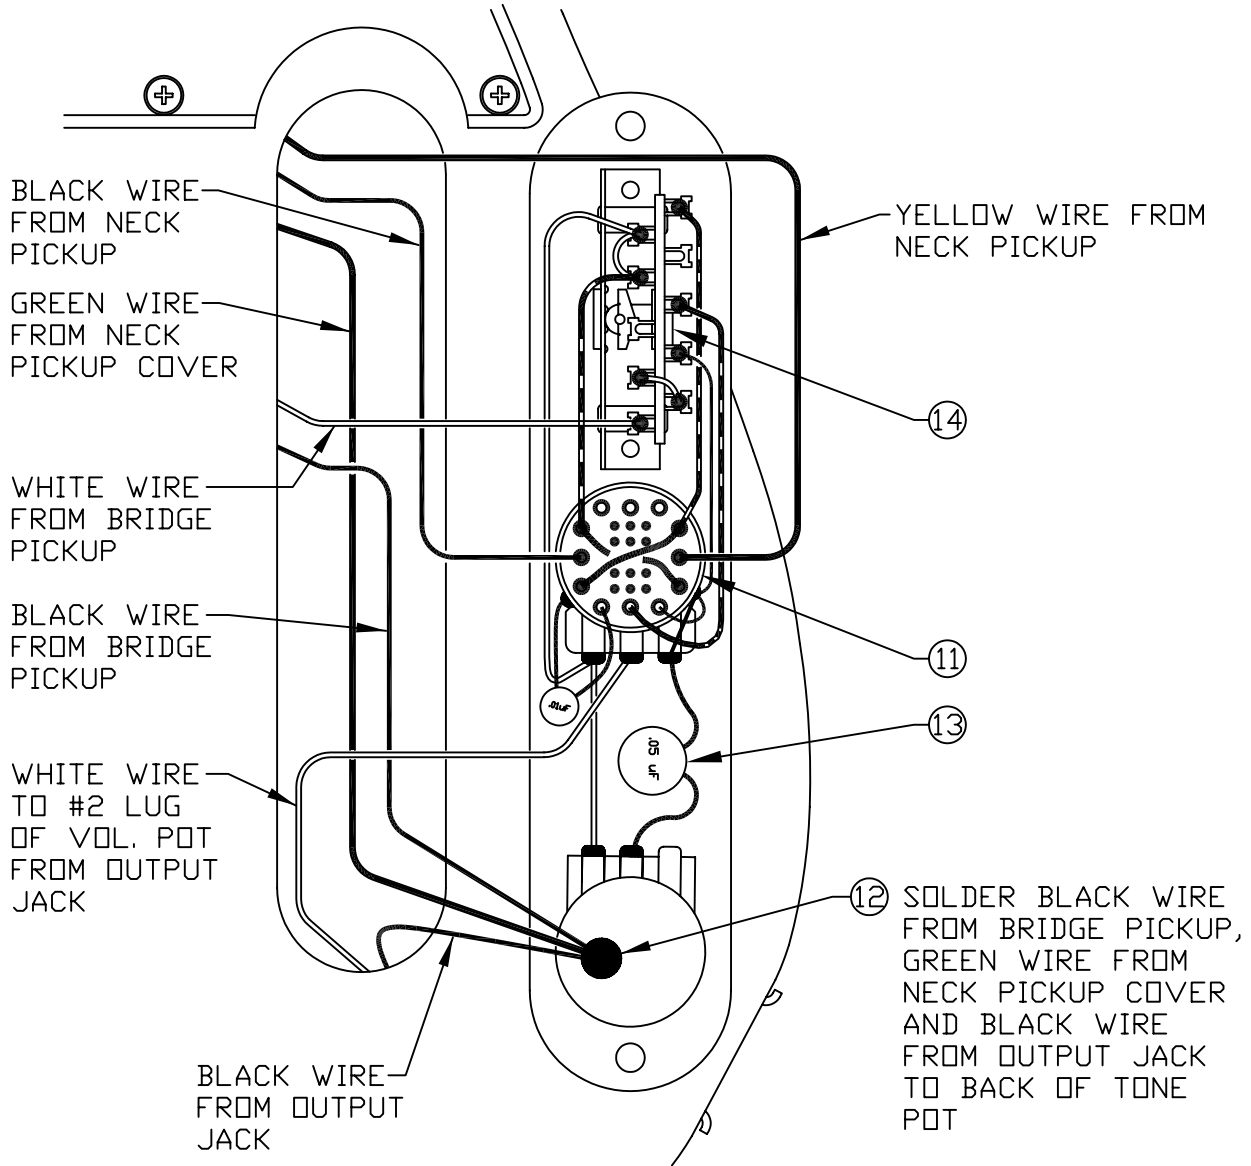

CLASSIC PLAYER BAJA TELECASTER®, 014-1502

SWITCH & CONTROL FUNCTION

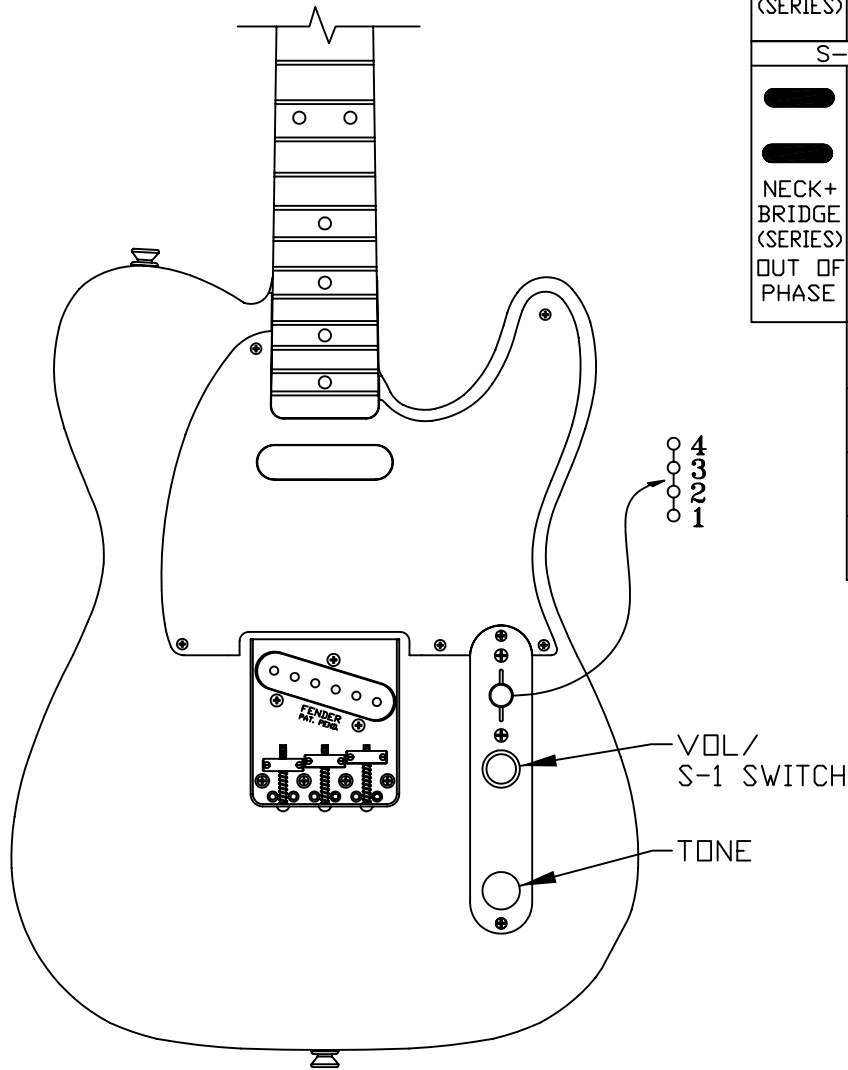

4 WAY SWITCH POSITION				MASTER VOLUME AND MASTER TONE WORKS IN ALL POSITIONS
4	3	2	1	
S-1 SWITCH OFF (UP)				
				← NECK PICKUP (A)
NECK+ BRIDGE (SERIES)	NECK ONLY	NECK+ BRIDGE (PARALELL)	BRIDGE ONLY	← BRIDGE PICKUP (B)
S-1 SWITCH ON (DOWN)				
				← NECK PICKUP (A)
NECK+ BRIDGE (SERIES) OUT OF PHASE	NECK ONLY	NECK+ BRIDGE (PARALELL) OUT OF PHASE	BRIDGE ONLY	← BRIDGE PICKUP (B)
				INDICATES POSITION OF 4 WAY SWITCH