
70'S STRATOCASTER 0137000/7002

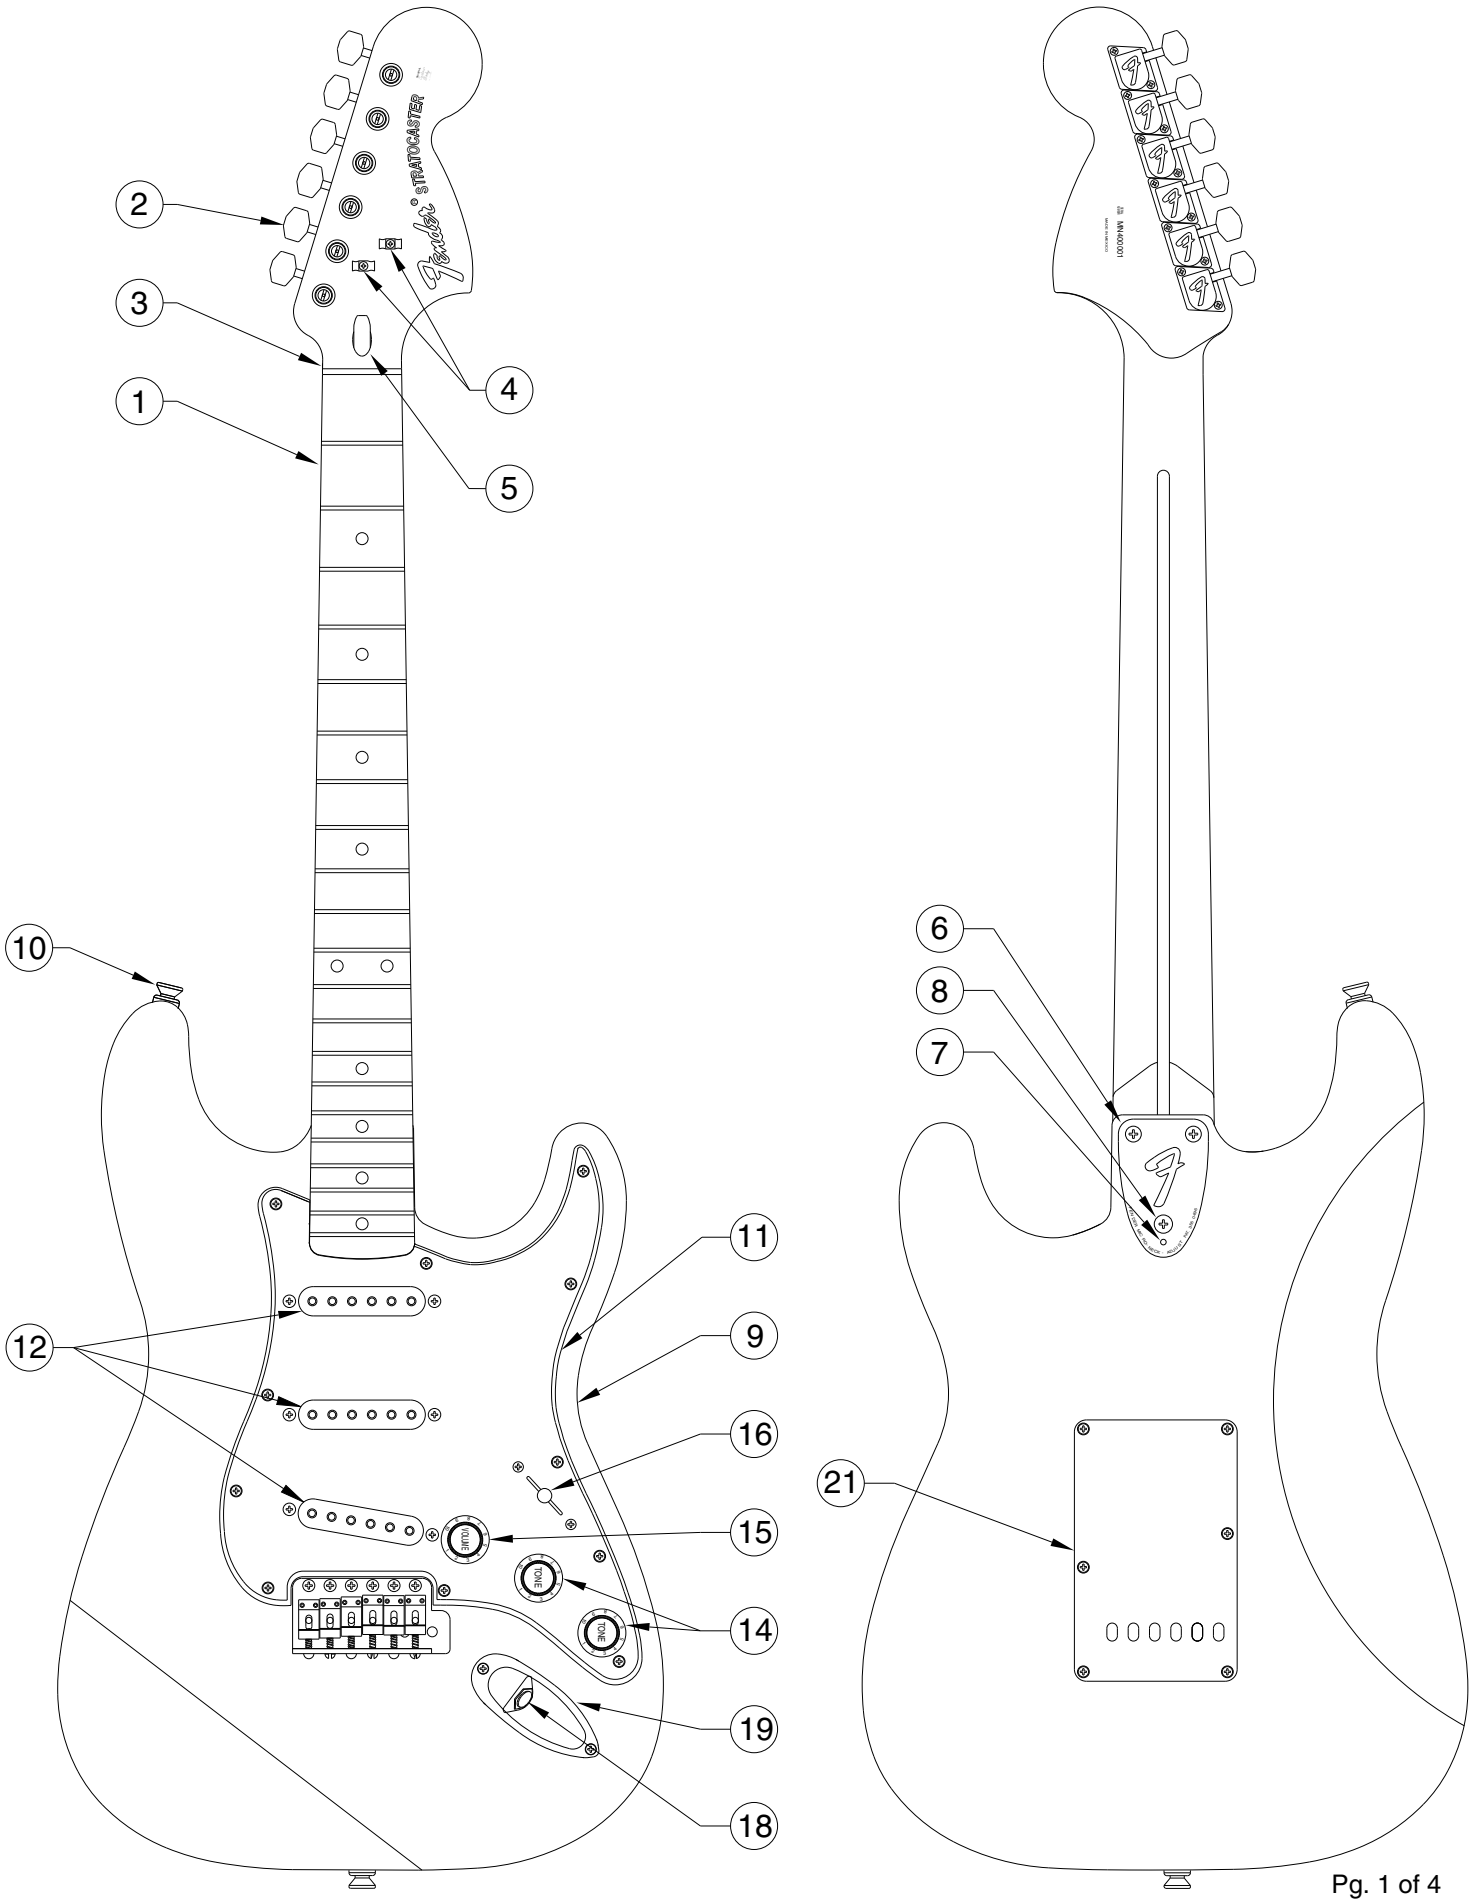


70'S STRATOCASTER 0137000/7002

REF.#	P/N	DESCRIPTION
1	0054549000	Neck, 70'S Strat Mex RW
	0054551000	Neck, 70'S Strat Mex MN
	0020220000	Tilt Disk, Neck
	0084699000	Mounting Screw
2	0053684000	Tuning Key, (1) Set
	0011357000	Mounting Screw
3	0083675000	Bone Nut
4	0010389000	String Guide
	0020423000	Spacer
	0011358000	Mounting Screw
5	0010286000	Truss Rod Adjustment Nut
	0018622000	Adjusting Wrench, Adjust Nut
6	0054525000	Neck Mounting Plate
	0015636000	Mounting Screw
7	0020972000	Set Screw
8	0012156000	Bolt, Adjusting
9	0054552XXX	Body, 70'S Strat Mex. Ash
	0020212000	Tilt Disk, Body
	0084699000	Mounting Screw
10	0012344000	Strap Button
	0015610000	Mounting Screw
11	0054622000	Pickguard, 70'S Strat W/B/W
	0015578000	Mounting Screw
12	0054594000	Pickup Assy., Vint. Strat Mex. (3)
	0015776000	Mounting Screw
	0036878000	Tubing, Latex Cut
13	0013446000	Control, Volume/Tone 250K (3)
	0016352000	Mounting Nut
	0016436000	Washer, Lock Intl.
14	0021240000	Knob, Tone Std. Strat. White (2)
15	0021239000	Knob, Volume Std. Strat. White
16	0053291000	Switch, 5 Way Grigsby W/Metal Roller
	0019554000	Knob, White
	0015776000	Mounting Screw
17	0021022000	Capacitor, PFF RDL .1uF 200V
18	0047329000	Output Jack
	0016352000	Mounting Nut
	0016436000	Washer, Lock Intl.
19	0010280090	Ferrule, Jack
	0015578000	Mounting Screw
20	0054619000	Bridge Assy, Vint. Strat
	0016170000	Mounting Screw
	0054620000	Arm, Tremolo Vint.
	0050920000	Knob, Tremolo Arm White
	0050918000	Claw, Tremolo
	0031643000	Spring, Tremolo
	0015636000	Mounting Screw
	0018531000	Adjusting Wrench, Saddle Height
21	0019649002	Back Plate, Vint Strat White
	0015578000	Mounting Screw

Body Part Number	
0054552500	3-Color Sunburst
0054552505	Olympic White
0054552521	Natural

70's STRATOCASTER® , RW/MN, ASH, 013-7000/7002

SWITCH & CONTROL FUNCTION

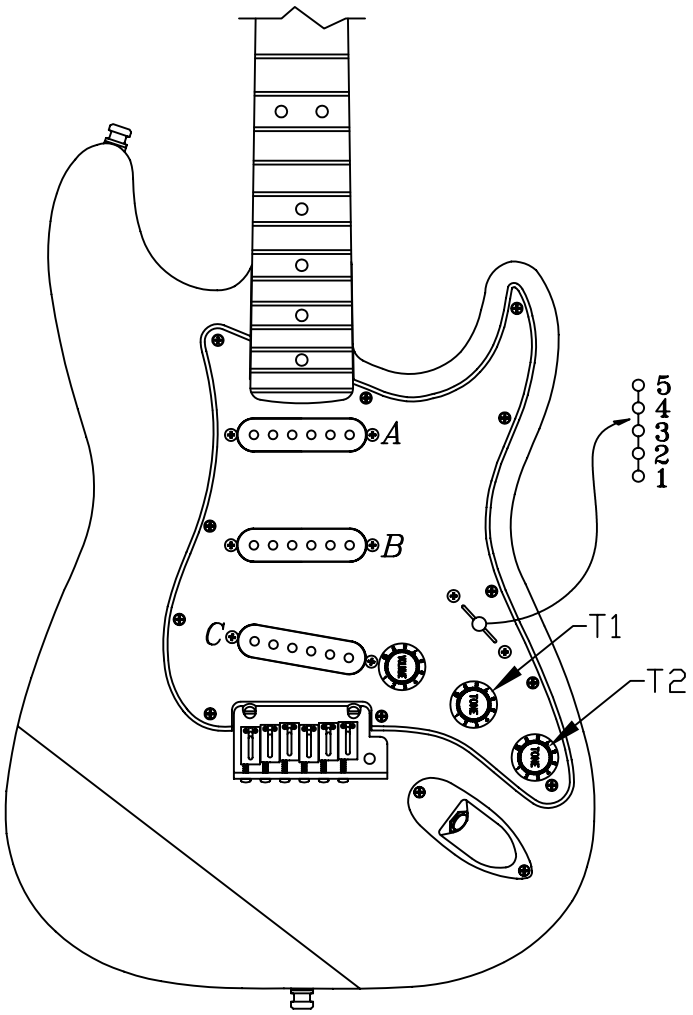


5 WAY SWITCH POSITION					
5	4	3	2	1	
T1	T1&T2	T2	T2	NT	
■	■	□	□	□	← NECK PICKUP (A)
□	■	■	■	□	← MIDDLE PICKUP (B)
▱	▱	▱	▰	▰	← BRIDGE PICKUP (C)

■	PICKUP IS ON
□	PICKUP IS OFF
A	PICKUP (NECK)
B	PICKUP (MIDDLE)
C	PICKUP (BRIDGE)
NT	NO TONE

1 ← INDICATES POSITION OF 5 WAY SWITCH

70'S STRATOCASTER 0137000/7002

PICKGUARD ASSEMBLY

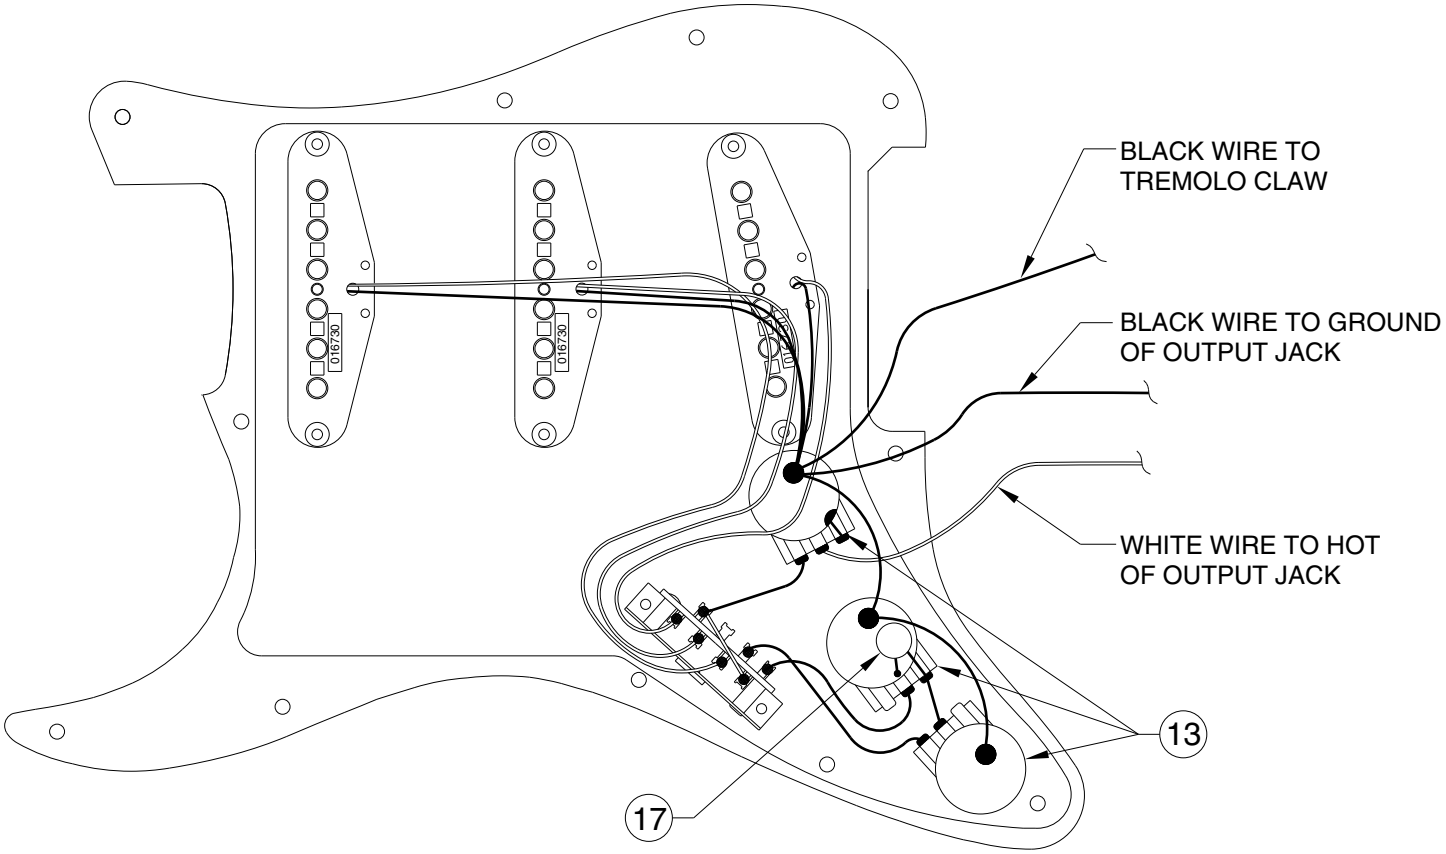

BRIDGE ASSEMBLY

