
VIntage Dark-Mode Tele Wiring

Wiring used in the Pre-CBS days
(For many vintage reissue models)

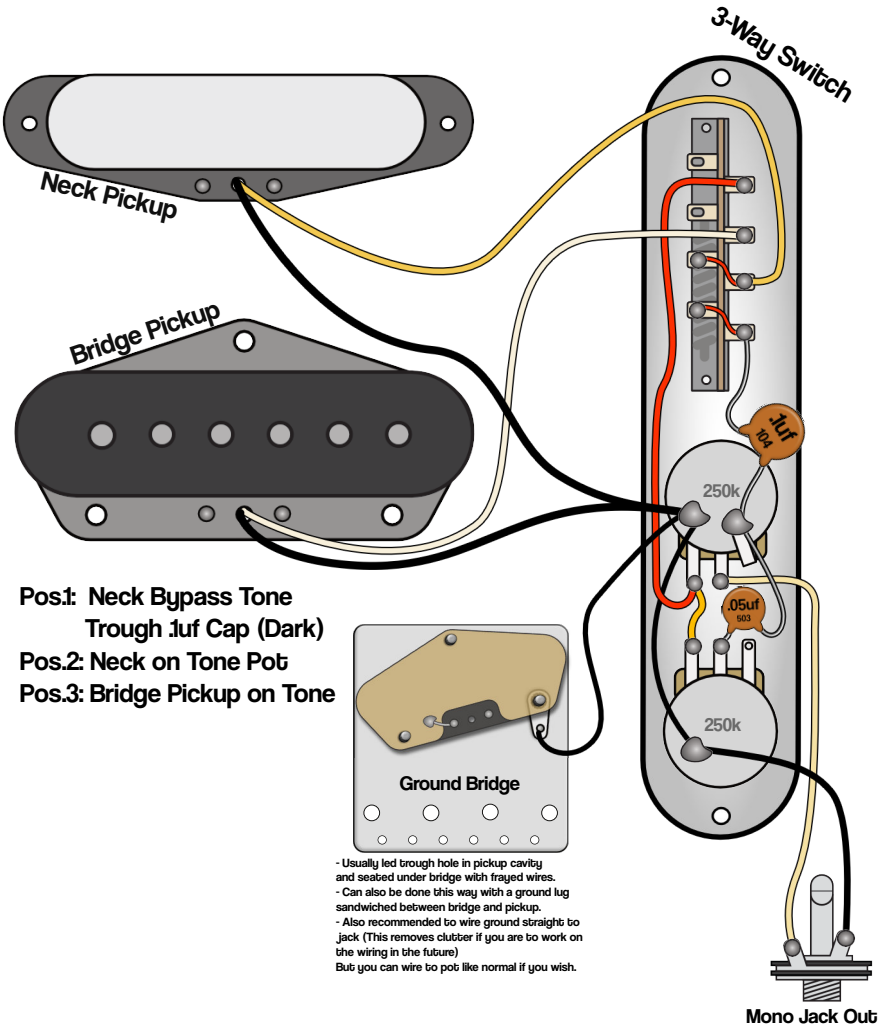

Pos.1: Neck Bypass Tone
Trough .1uf Cap (Dark)
Pos.2: Neck on Tone Pot
Pos.3: Bridge Pickup on Tone

- Usually led trough hole in pickup cavity and seated under bridge with frayed wires.
- Can also be done this way with a ground lug sandwiched between bridge and pickup.
- Also recommended to wire ground straight to jack (This removes clutter if you are to work on the wiring in the future)
But you can wire to pot like normal if you wish.

www.axefiles.com

Graphics by Gerry Haze. all rights reserved