


WIRING ASSEMBLY

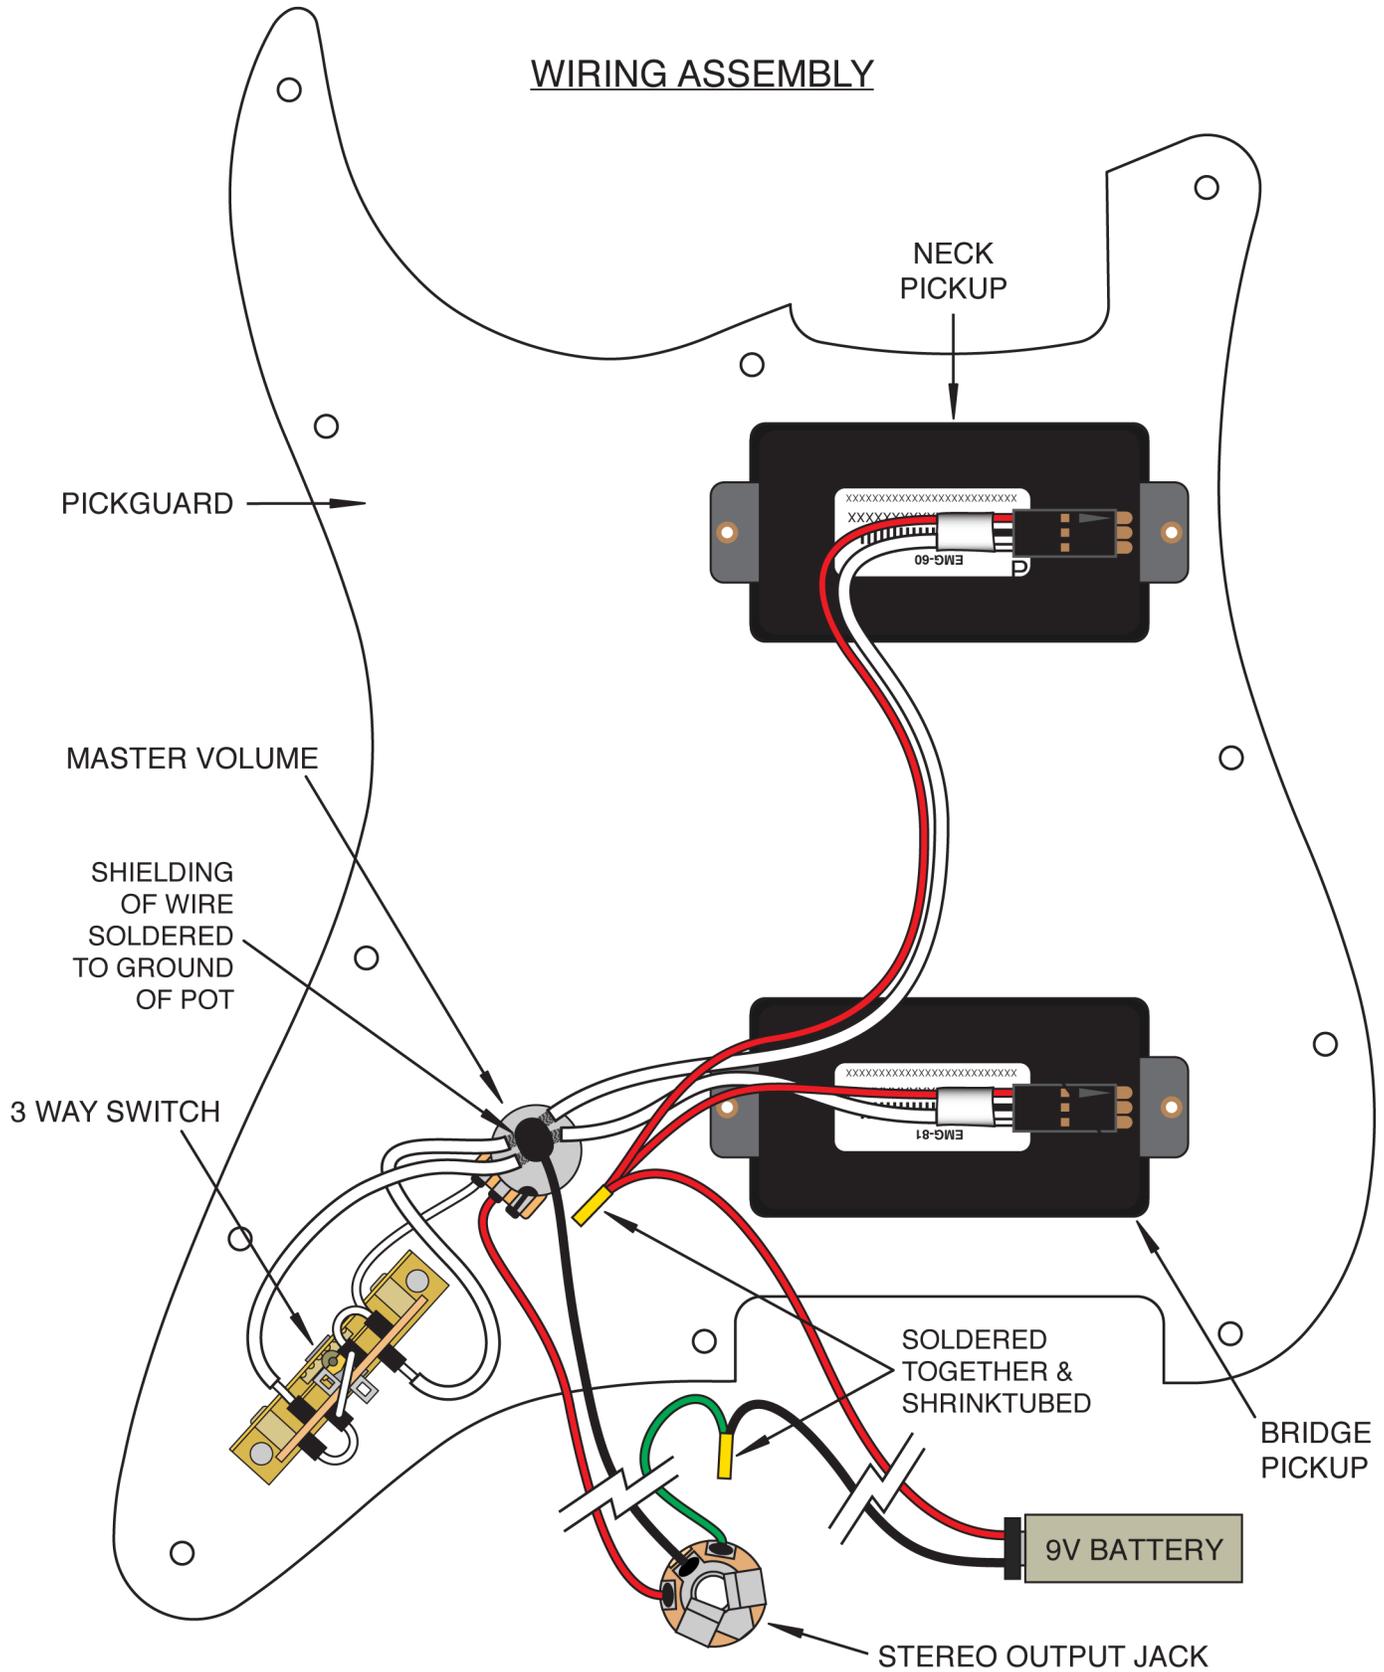

ALL SOLDER (BLACK DOTS IN DIAGRAM) MUST BE LEAD-FREE ROHS COMPLIANT.