


American Deluxe Telecaster SSS Wiring

010-5500/5502 (7-Way Wiring)

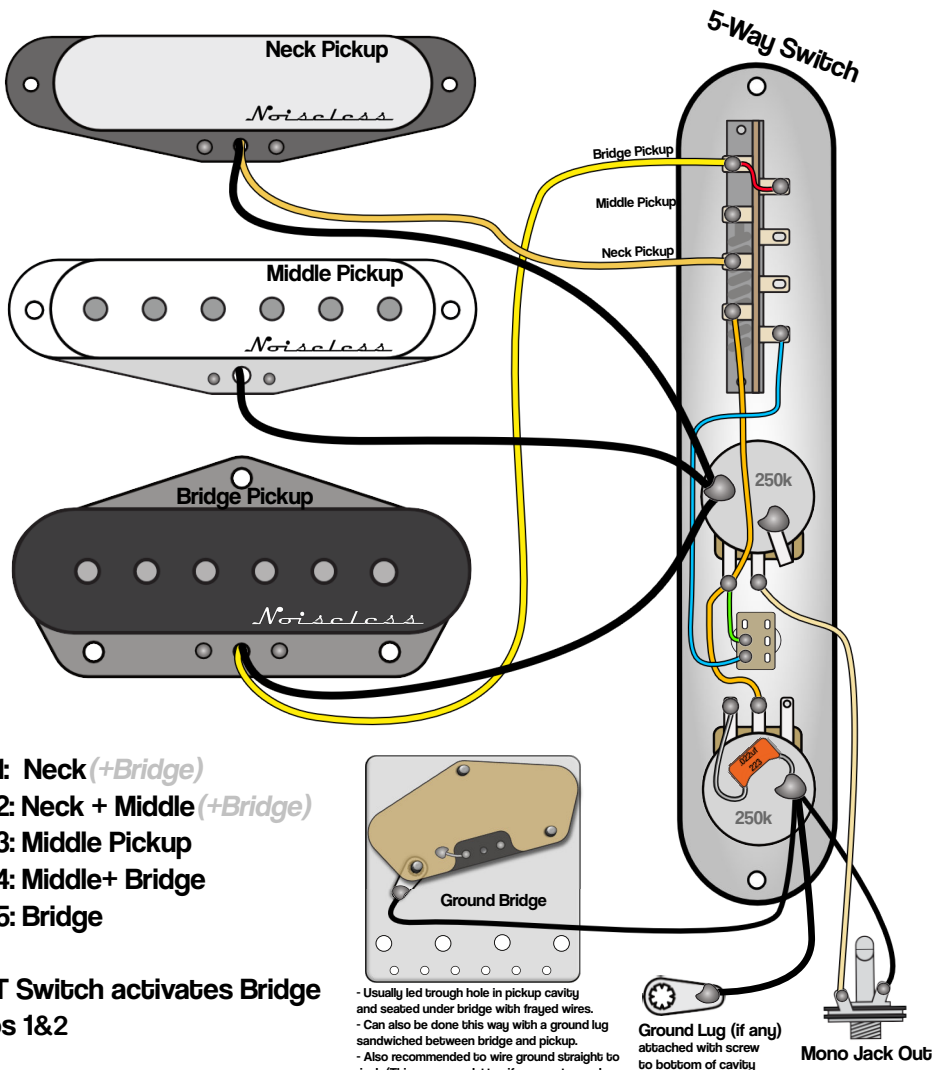

- Pos 1: Neck (+Bridge)
- Pos 2: Neck + Middle (+Bridge)
- Pos 3: Middle Pickup
- Pos 4: Middle+ Bridge
- Pos 5: Bridge

DPDT Switch activates Bridge in Pos 1&2

- Usually led through hole in pickup cavity and seated under bridge with frayed wires.
- Can also be done this way with a ground lug sandwiched between bridge and pickup.
- Also recommended to wire ground straight to jack (This removes clutter if you are to work on the wiring in the future)
- But you can wire to pot like normal if you wish.



3.13.2026
Rev.A