


# American Deluxe Telecaster V2

010-4600/4602 (Noiseless)

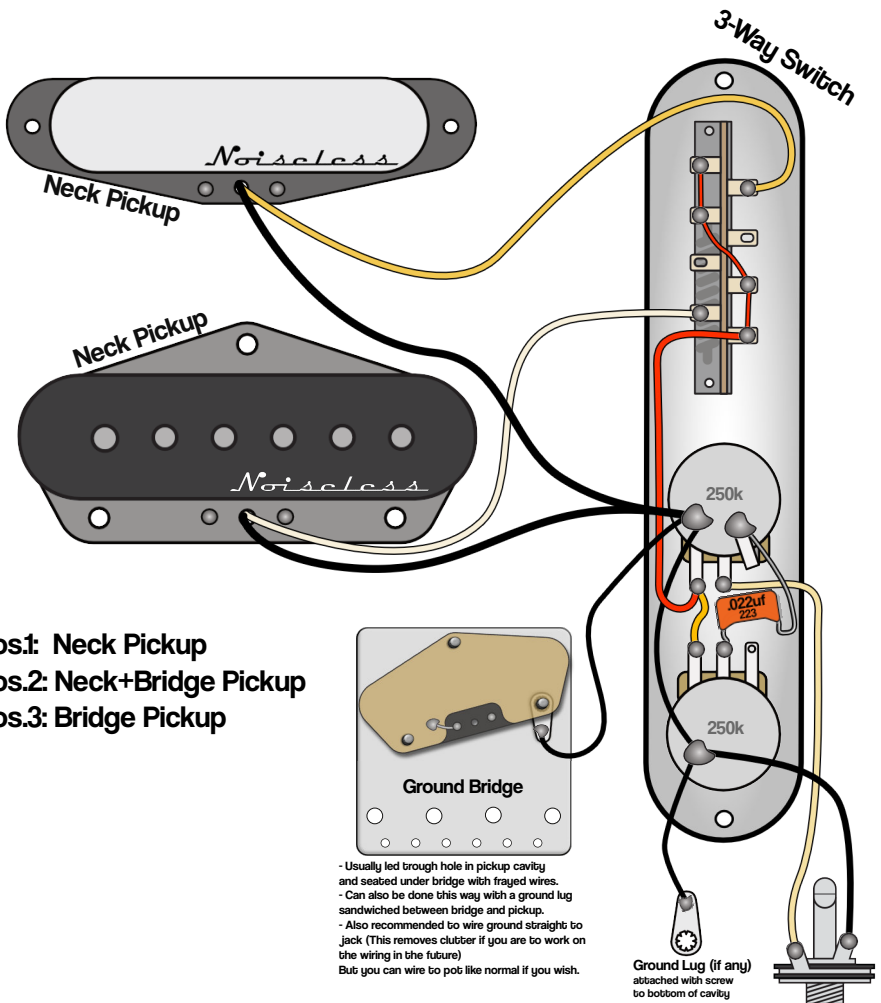

Pos.1: Neck Pickup  
Pos.2: Neck+Bridge Pickup  
Pos.3: Bridge Pickup

- Usually led trough hole in pickup cavity and seated under bridge with frayed wires.
  - Can also be done this way with a ground lug sandwiched between bridge and pickup.
  - Also recommended to wire ground straight to jack (This removes clutter if you are to work on the wiring in the future)
- But you can wire to pot like normal if you wish.

3.13.2026  
Rev.A

[www.axefiles.com](http://www.axefiles.com)

Graphics by Gerry Haze. all rights reserved