


American Vintage Hot-Rod '52

010-0232

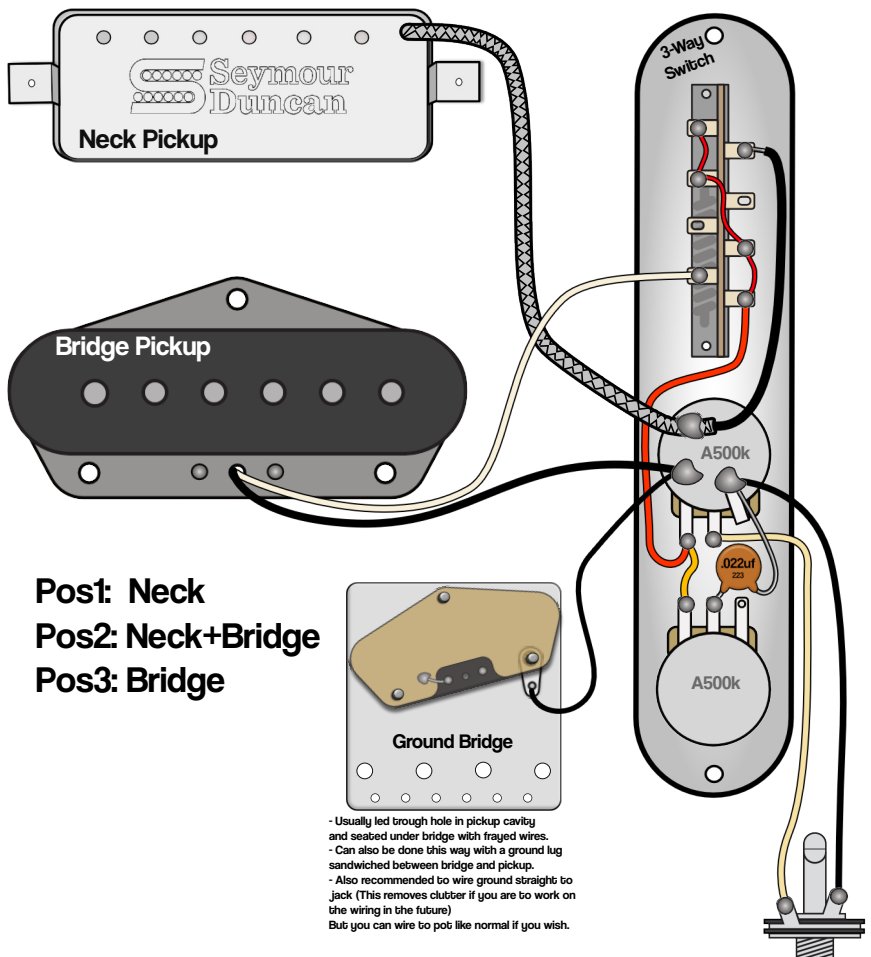

Pos1: Neck
Pos2: Neck+Bridge
Pos3: Bridge

- Usually led through hole in pickup cavity and sealed under bridge with frayed wires.
 - Can also be done this way with a ground lug sandwiched between bridge and pickup.
 - Also recommended to wire ground straight to jack (This removes clutter if you are to work on the wiring in the future)
- But you can wire to pot like normal if you wish.

Mono Jack Out

3.13.2026
Rev.A

www.axefiles.com

Graphics by Gerry Haze. all rights reserved