


Delta-Tone Telecaster Wiring

The Modern wiring for many models with .022 Cap

- Pos.1: Neck Pickup
- Pos.2: Neck + Bridge Pickup
- Pos.3: Bridge Pickup

3-Way Switch

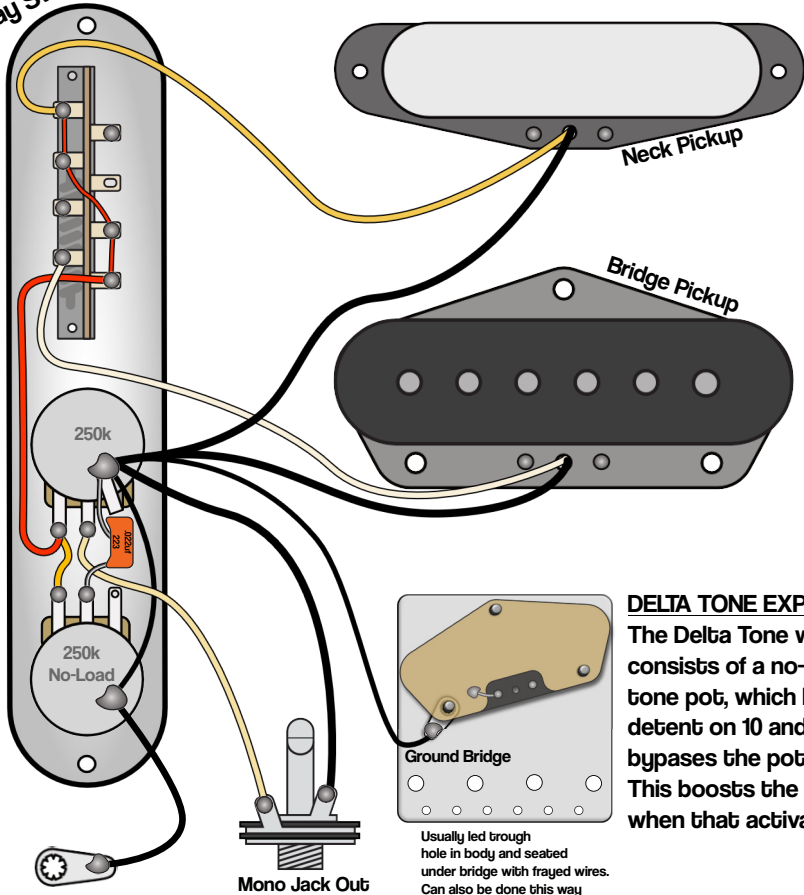

Ground Lug (if any)
attached with screw
to bottom of cavity

DELTA TONE EXPLAINED:

The Delta Tone wiring consists of a no-load tone pot, which has a detent on 10 and thus bypasses the pot entirely. This boosts the volume when that activates.

Usually led through hole in body and seated under bridge with frayed wires. Can also be done this way

3.13.2026
Rev.A

www.axefiles.com

Graphics by Gerry Haze. all rights reserved