


# FENDER ELITE TELECASTER

(P/N 101500, 101502, 101522,  
101550, 101570, 101572)  
(PARTS LIST)

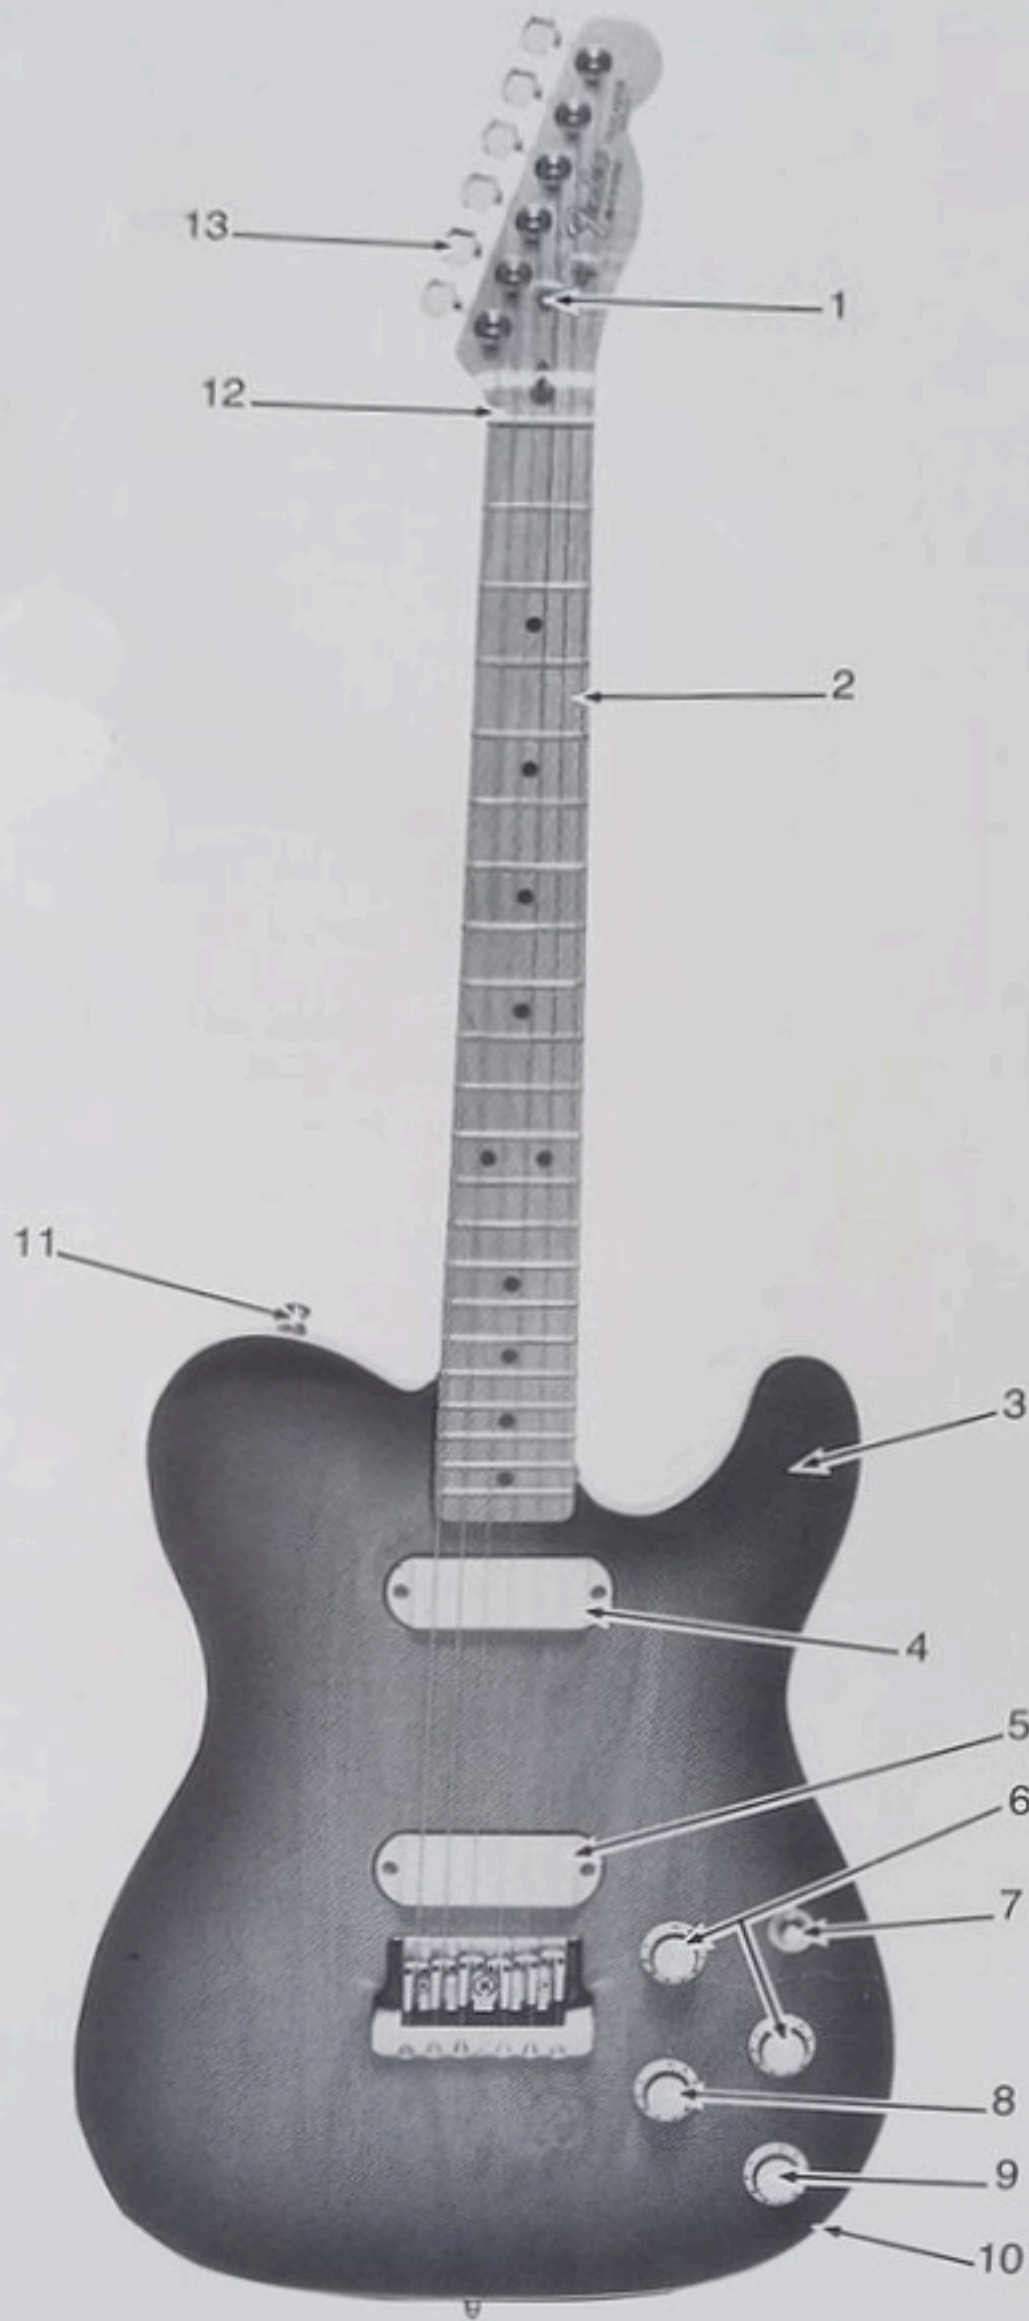


Ref	Part Number	Description
1	021537 000	String Guide
1	021927 000	String Guide, Gold
1	021405 000	Screw, String Guide Mounting
1	018823 000	Screw, String Guide Mounting, Gold
2	020542 000	Neck, Maple w/Hdw
2	020541 000	Neck, Rosewood w/Hdw
2	022167 000	Neck, Maple w/Hdw, Gold
2	022174 000	Neck, Rosewood w/Hdw, Gold
2	021933 000	Neck, Walnut w/Hdw
2	020540 000	Neck, Maple w/Hdw (L/H)**
3*	022643 506	Body, Black
3*	022643 521	Body, Natural
3*	022643 531	Body, Sienna Sunburst
3*	022643 532	Body, Brown Sunburst
3*	022643 543	Body, Pewter
3*	022643 580	Body, Artic White
3	022644 506	Body, Black (L/H)**
3	022644 532	Body, Brown Sunburst (L/H)**
3	022645 000	Body, Walnut
4	021615 000	Pickup, Rhythm
4	020267 000	Pickup Cover
4	021693 000	Screw, Pickup Height Adjustment
4	021959 000	Screw, Pickup Height Adjustment, Gold
5	021619 000	Pickup, Lead
6	022033 000	Knob, Controls
6	021430 000	Nut, Control Mounting
6	021431 000	Washer, Controls
6	021685 000	Control, Volume, 1 Meg Audio
7	021712 000	3-Position Switch w/knob
7	023024 040	Nut, Switch Mounting
7	023024 000	Nut, Switch Mounting, Gold
7	022825 040	Washer, Switch
7	022825 000	Washer, Switch, Gold
8	021684 000	Control, Mid Boost, 50K Linear
9	021686 000	Control, Tone, 250KA-1Meg L, Concentric
10	021621 000	Jack
10	022012 000	Nut, Jack Mounting
10	022293 000	Washer, Jack
10	016469 000	Washer, Lock, Jack
11	021453 000	Strap Button
11	021422 000	Screw, Strap Button Mounting
11	021950 000	Strap Button, Gold
11	018845 000	Screw, Strap Button Mounting, Gold
11	019056 000	Felt Washer, Black
11	020491 000	Felt Washer, White
12	021850 000	Bone Nut
12	083675 000	Bone Nut (L/H)**
13	021678 000	Patent Heads
13	021942 000	Patent Heads, Gold
13	022118 000	Patent Heads (L/H)**

\*Also Available in Custom Colors, Refer to Color Chart.

\*(L/H) Indicates Left Handed



# FENDER ELITE TELECASTER PC BOARD ASSEMBLY (P/N 021213) (PARTS LIST)

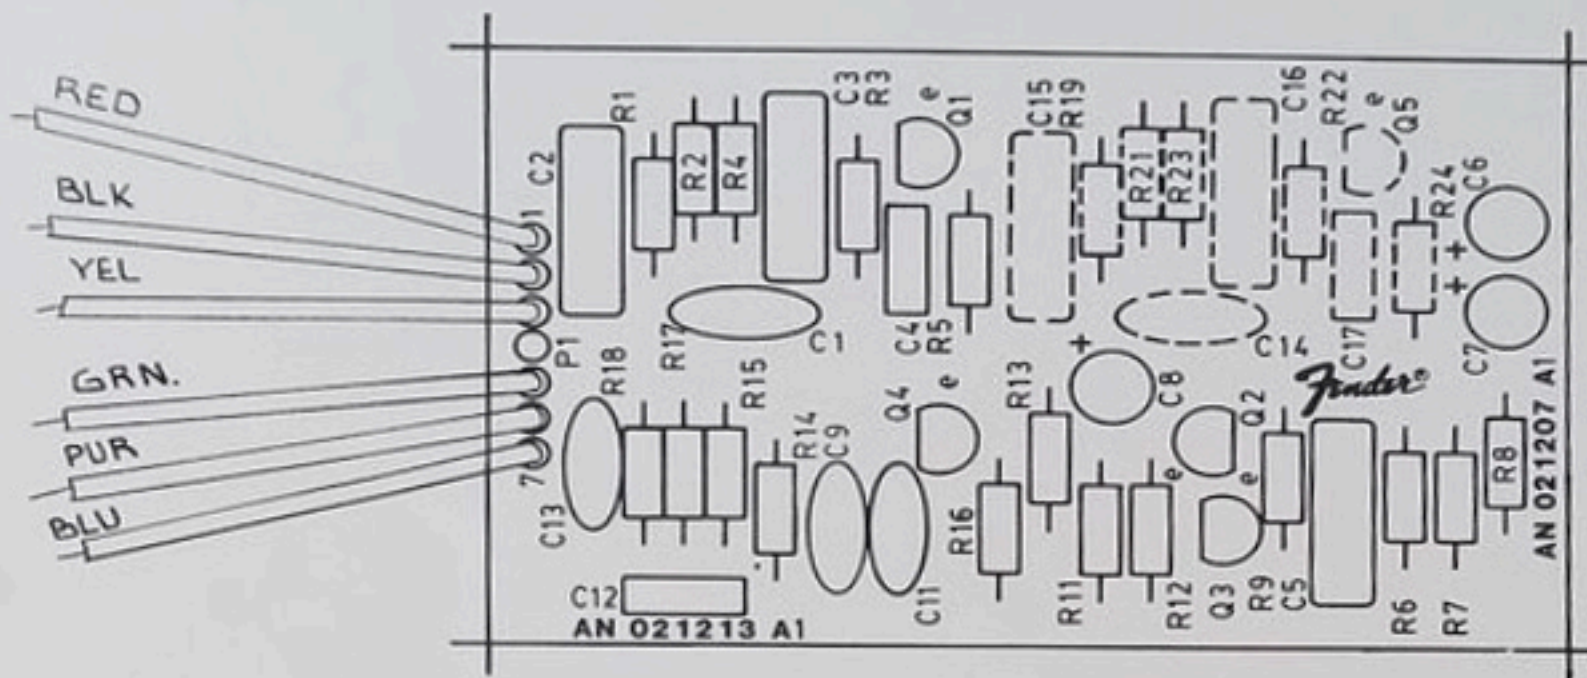

### CAPACITORS

020883	10 pf $\pm$ 10%	C11
020925	120 pf $\pm$ 10%	C1
060962	.001 uf $\pm$ 10%	C9, 13
019956	.0068 uf $\pm$ 10%	C3, 2
019963	.022 uf $\pm$ 10%	C5
017497	.1 uf 63V	C4, 12
015124	10 uf 16V	C6, 7, 8

### RESISTORS

016929	46.4 ohm $\pm$ 1% 1/4w	R16
016339	3.01 K $\pm$ 1% 1/4w	R5
016968	21.5 K $\pm$ 1% 1/4w	R11, 12
016971	33.2 K $\pm$ 1% 1/4w	R15, 3
015583	46.4 K $\pm$ 1% 1/4w	R4, 13, 17, 18
016975	82.5 K $\pm$ 1% 1/4w	R9
015585	100 K $\pm$ 1% 1/4w	R14
017378	133 K $\pm$ 1% 1/4w	R8
016979	215 K $\pm$ 1% 1/4w	R7
016982	332 K $\pm$ 1% 1/4w	R1, 6
016193	680 K $\pm$ 5% 1/4w	R2

### TRANSISTORS

017487	2N5087	Q4
017486	2N6429	Q1, 2, 3