


SUSAN TEDESCHI TELECASTER (0116800794)

PARTS LAYOUT

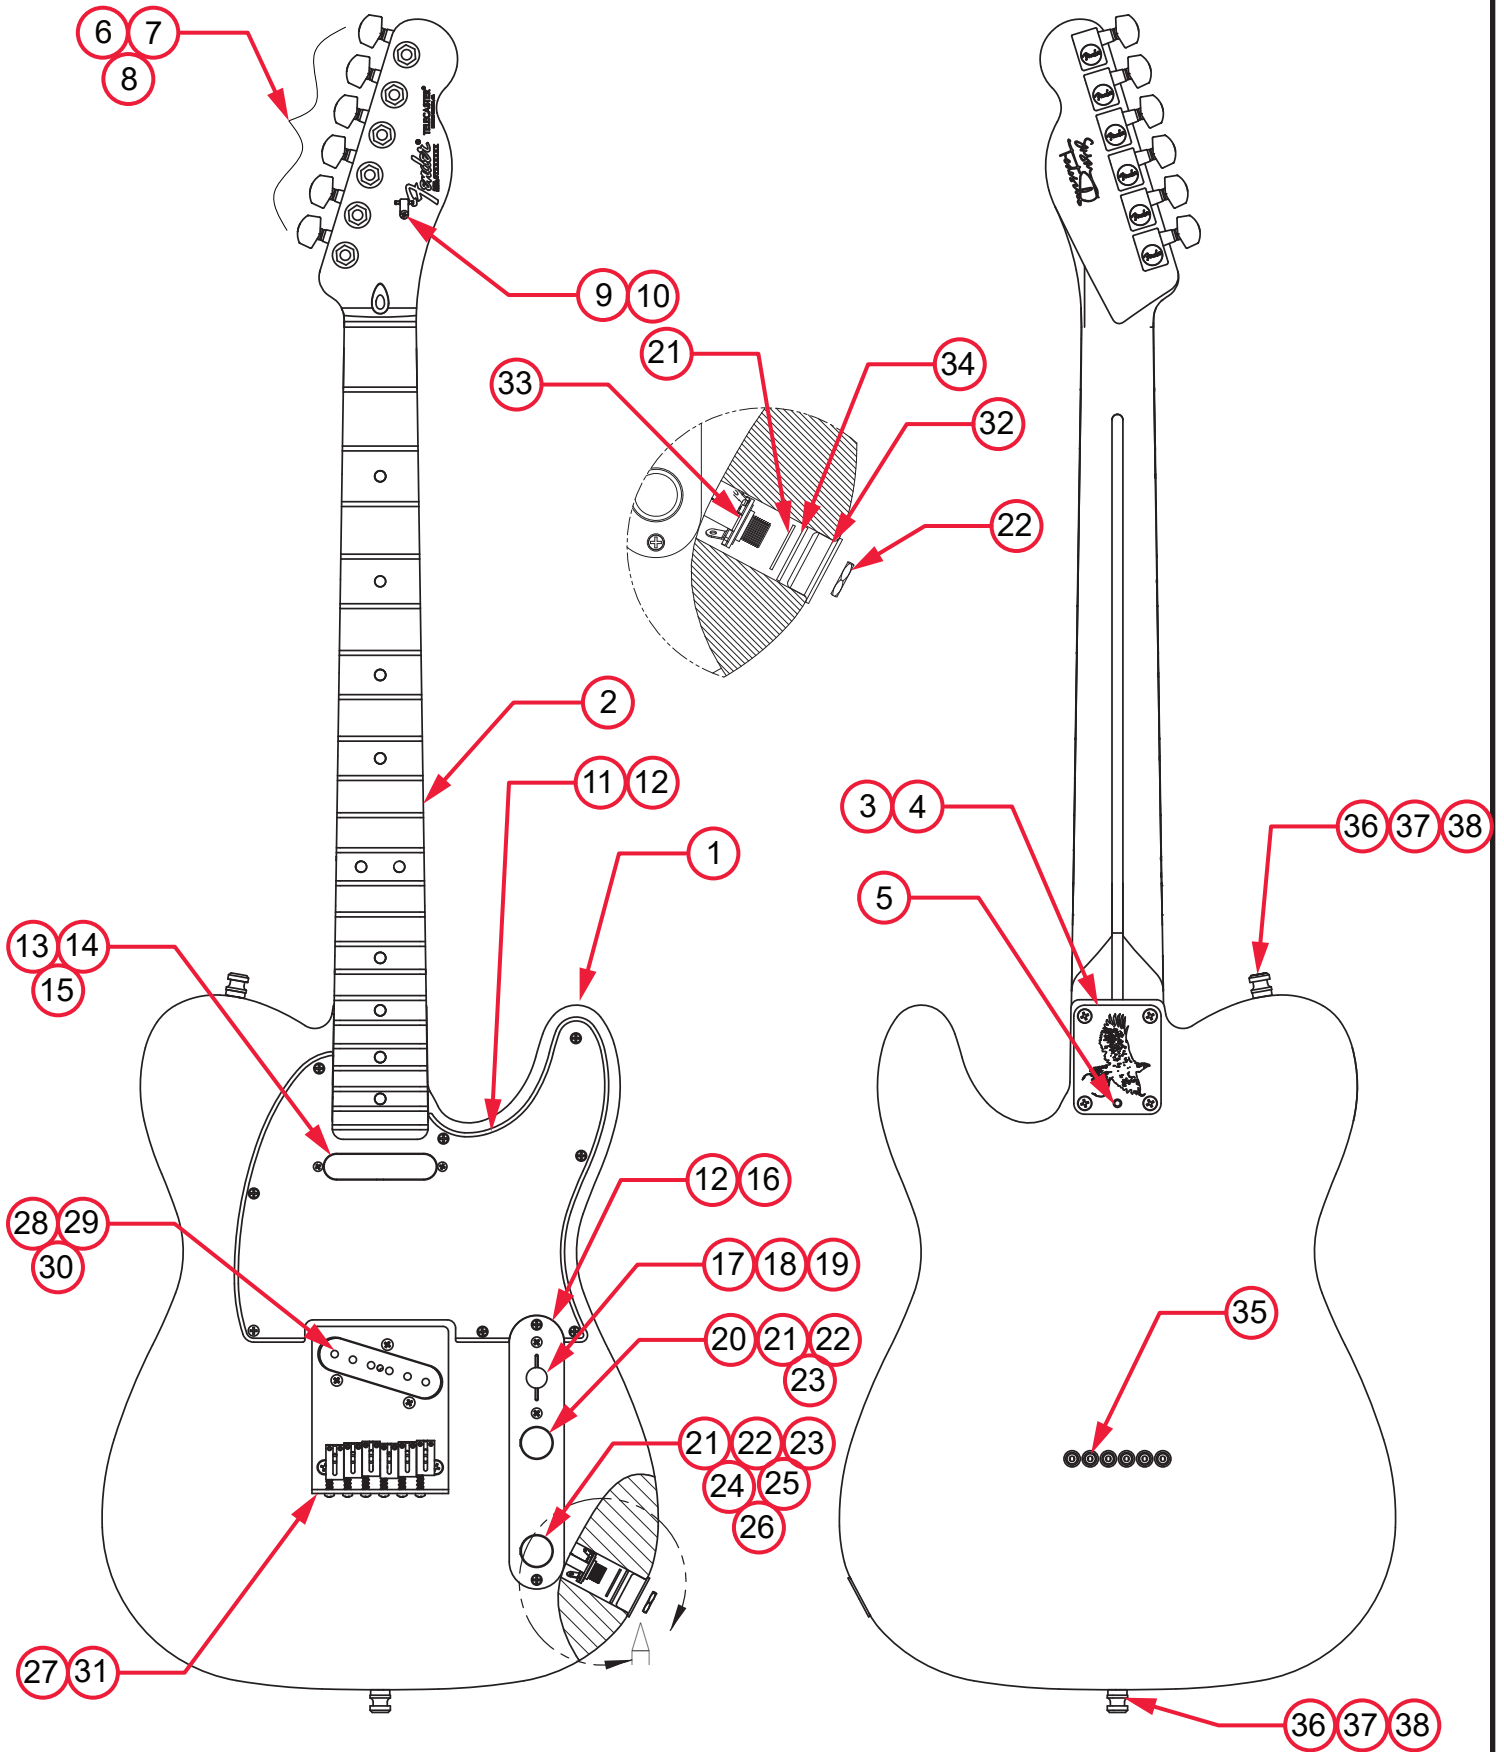

SUSAN TEDESCHI TELECASTER (0116800794)

PARTS LIST


REF#	DESCRIPTION	PART NUMBER
1	BODY SUSAN TEDESCHI TELE ACM	7727664594
2	NECK ASSY SUSAN TEDESCHI TELE	7727663000
3	NECK PLATE SUSAN TEDESCHI	7728037000
4	SCREW SMA 8 X1-3/4 OHP NI	0015636049
5	SET SCREW 1/4-20 X 3/8 OP NI HEX	0031571049
6	KEY GTR DUAL PIN MTG CHR W/HDWR	0037429049
7	WASHERS KEY	0053106049
8	BUSHINGS KEY	0058820049
9	STRING TREE ELITE GUITAR CHR	0021537000
10	SCREW SMAB 3 X 3/8 RHP STL CHR	0021405049
11	PICKGUARD AM STD TELE BRN SHEL	7728744000
12	SCREW SMAB 4 X 1/2 OHP NI	0015578049
13	PICKUP ASSY SUSAN TEDESCHI TELE NECK	7727658000
14	SCREW MACH 4-40 X 7/8 RHP STL NI	7700222000
15	TUBING SILICONE RUBBER .625 RED	0068156000
16	TELE CONTROL PLATE ALUM CHR	0093823000
17	SWITCH 3-WAY LEVER	0992041000
18	KNOB SWITCH TELE W/NYLON INSERT BLK	7728973000
19	SCREWS MACH 6-32 X 5/8 NI	0994925000
20	CONTROL 250K 10% AUDIO METAL	0990831000
21	WASHER LOCKING INTL 3/8 X .687 X .035 NI	0016436049
22	NUT HEX 3/8-32 X 3/32 TK NI	0016352049
23	KNOB DIAMOND KNURL ALUM CHR	0095799049
24	CONTROL DUAL 250K/1M DETANT SOSH	0074335000
25	CAP MPF RDL .022uF 250V 10%	0024832049
26	RES CF 1/4W 82K 5%	0024996001
27	BRIDGE ASSY TELE NO P/U	0053056000
27A	BRIDGE PLATE AM STD TELE	0028184000
27B	BRIDGE SADDLES AM STD STRAT BEAD BLAST	0990840000
27C	SCREW MACH 4-40 X 3/4 PHP BLX	0031913049
27D	SPRING BRIDGE 7 COIL 5/8	0029095049
27E	SCREW MACH 4-40 X 5/8 PHP BLX	0017031049
27F	SPRING BRIDGE 6 COIL 1/2	0029094049
27G	SET SCREW 4-40 X 5/16 HEX CUP STL BLK	0026780049
27H	SET SCREW 4-40 X 3/8 HEX CUP STL BLK	0018027049

*= NOT PICTURED IN DIAGRAM



SUSAN TEDESCHI TELECASTER (0116800794)


WIRING ASSEMBLY

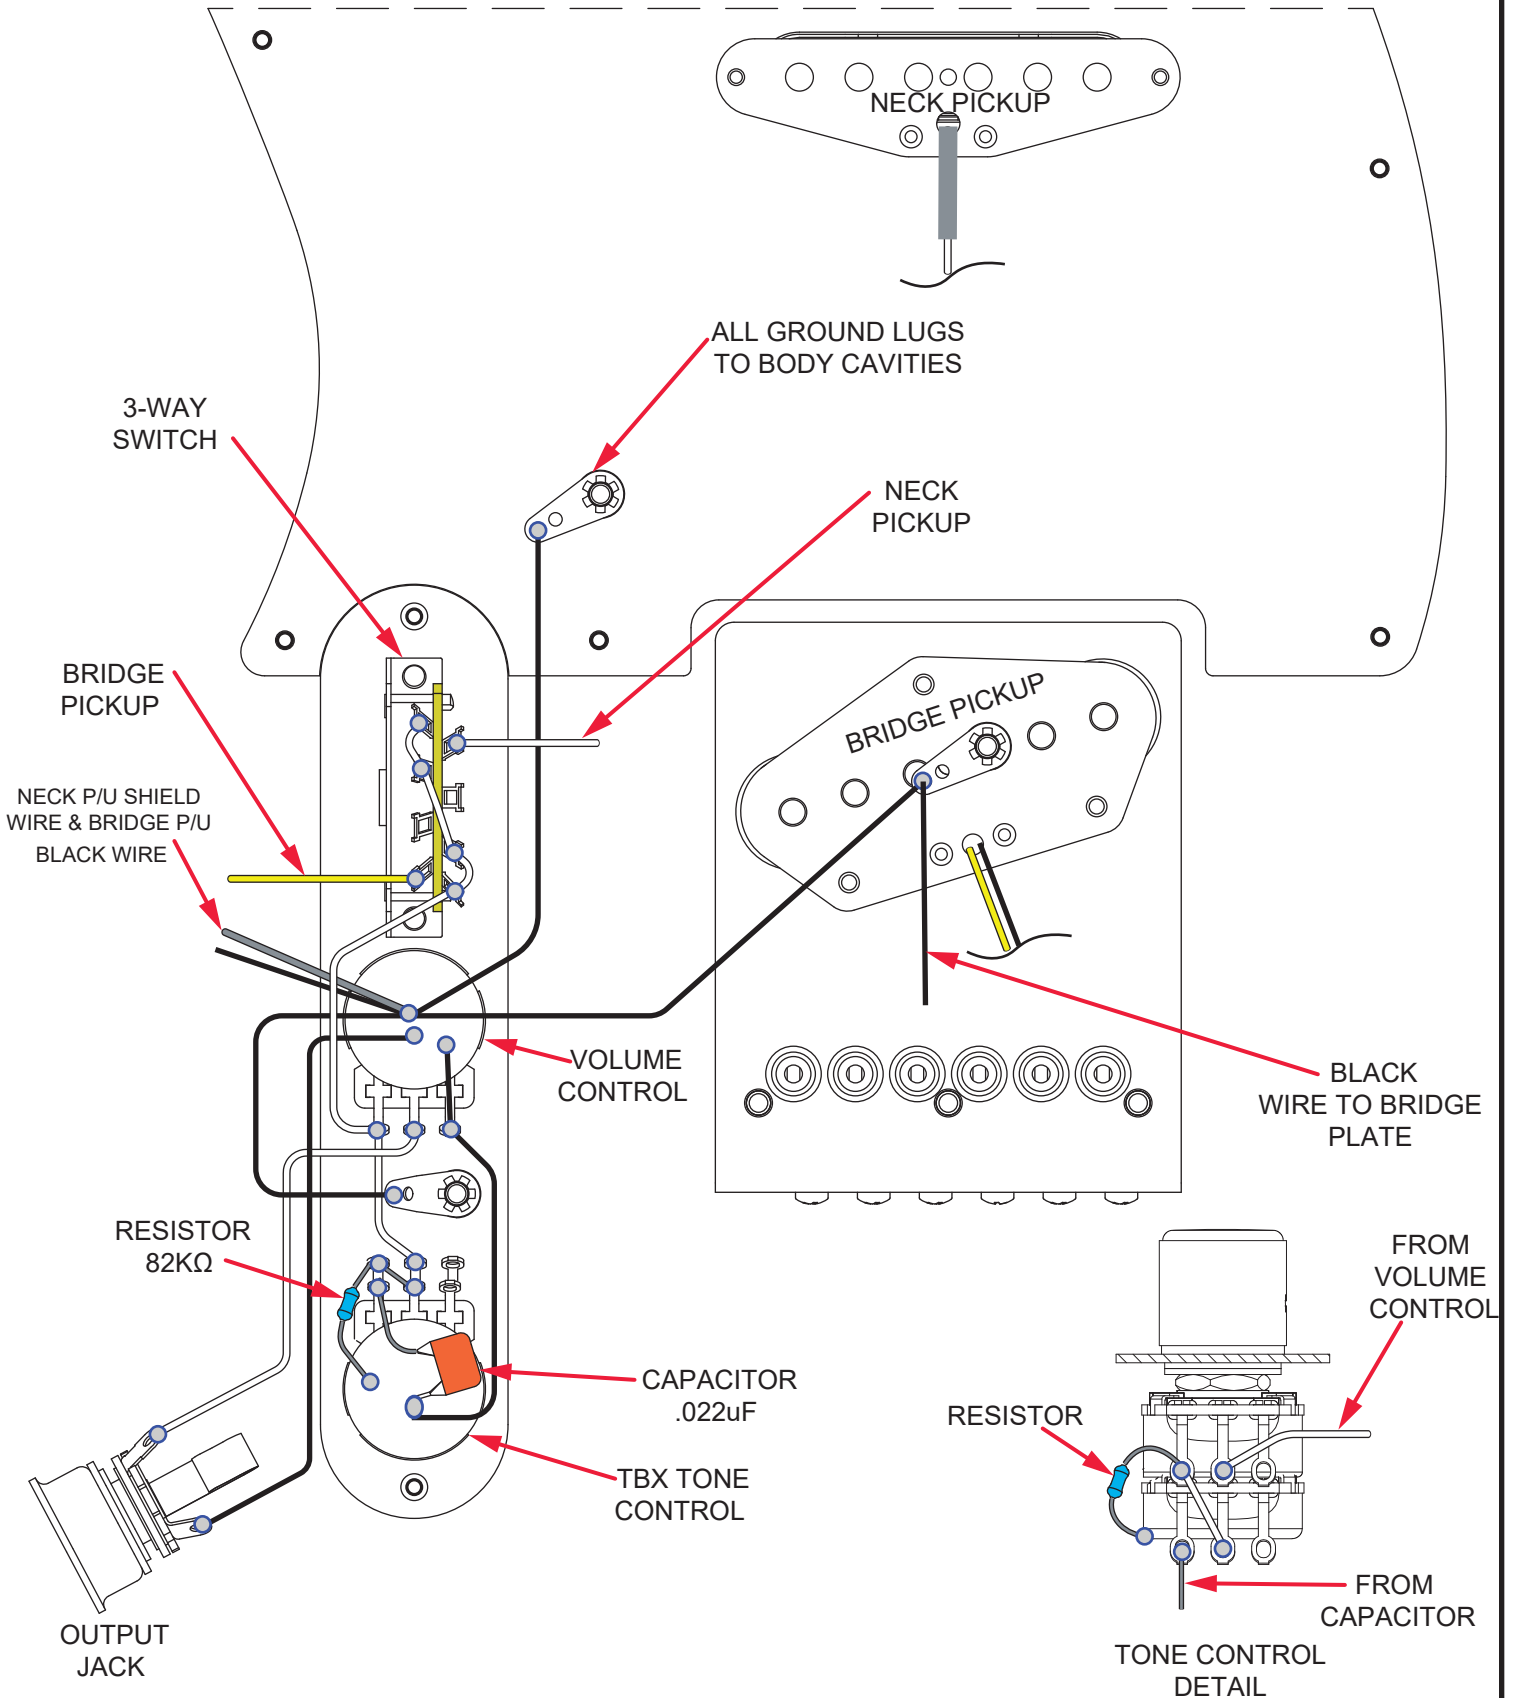

SUSAN TEDESCHI TELECASTER (0116800794)

SWITCH AND CONTROL FUNCTION

3-WAY SELECTOR POSITION				
NECK PICKUP				
BRIDGE PICKUP				

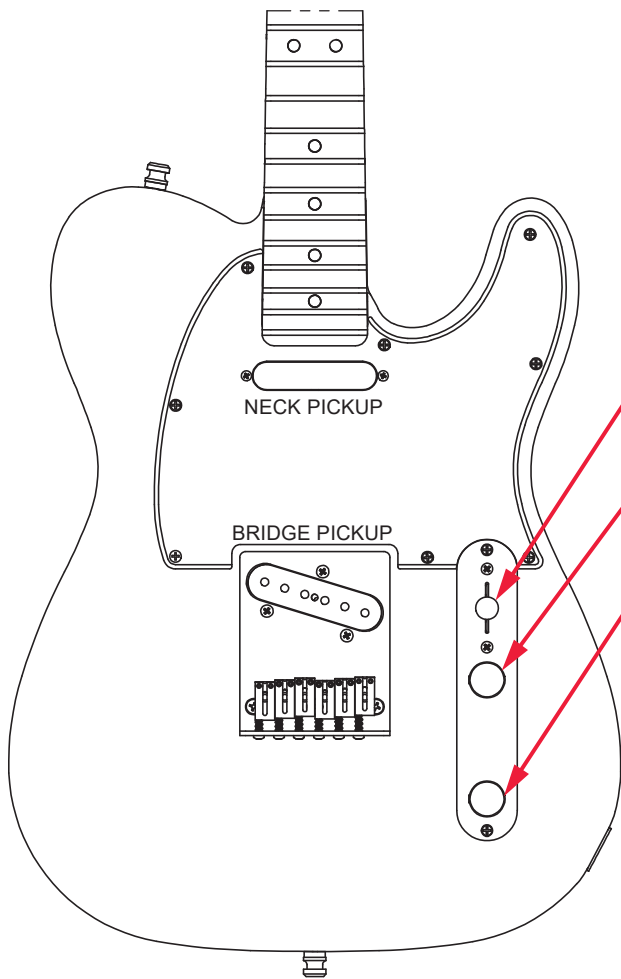

3-WAY SWITCH

MASTER VOLUME


MASTER TBX TONE

1. Turning the knob counterclockwise from the detent rolls off high frequencies like a traditional tone control.
2. Turning the knob clockwise from the detent adds presence & brightness.

SUSAN TEDESCHI TELECASTER (0116800794)


ADDITIONAL SPECIFICATION DETAIL

FRET SIZE: MEDIUM JUMBO
(FRET DIMENSIONS ARE BEFORE INSTALLATION)

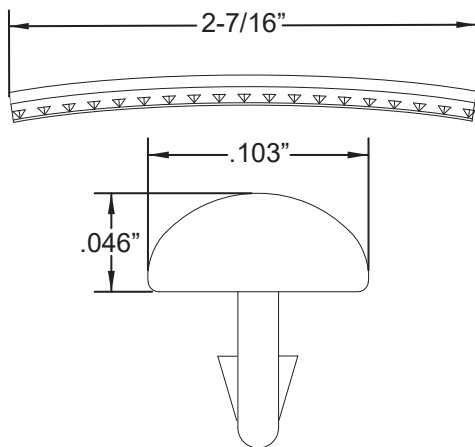


PLEASE NOTE: AS EACH NECK IS SANDED & FINISHED BY HAND, THICKNESS DIMENSIONS MAY VARY SLIGHTLY FROM THOSE SHOWN.

NECK PROFILE: SUSAN TEDESCHI "C"

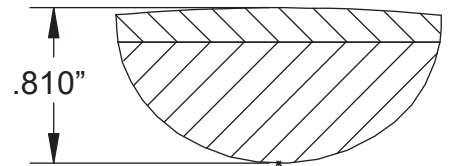


1ST FRET PROFILE

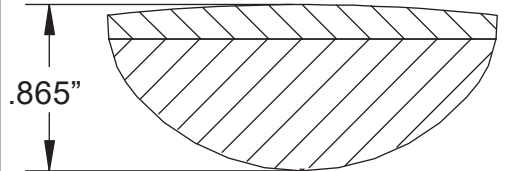


12TH FRET PROFILE


TUNING MACHINES : P/N 0037429049
OUTER SHAFT DIAMETER .394"

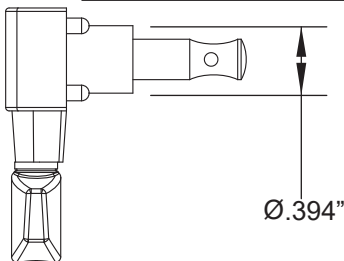

TUNING MACHINE THRU-HOLE
INNER DIAMETER .404"

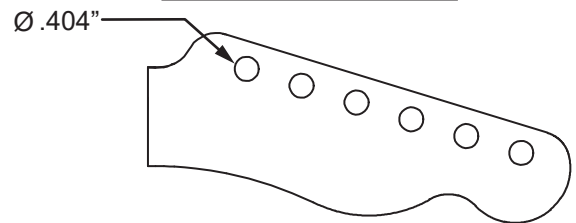


SADDLE HEIGHT ADJUSTMENT WRENCH:
.050" HEX KEY P/N 0018531049

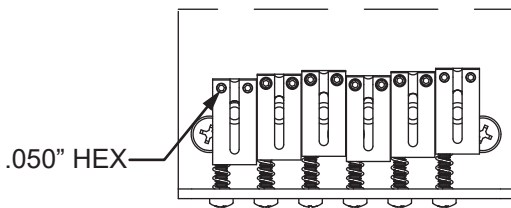

SADDLE HEIGHT ADJUSTMENT SCREWS:
TALL: P/N 0018027049 SHORT: P/N 0026780049

TRUSS ROD NUT P/N 0994943000
TRUSS ROD ADJUSTMENT WRENCH:
1/8" HEX KEY P/N 0023811049

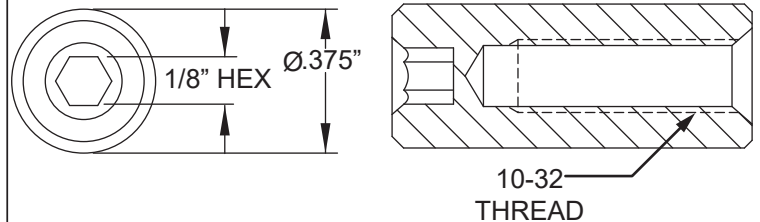

LOGO: SUSAN TEDESCHI TELECASTER
APPLIED UNDER THE FINISH



PICKUP SPECIFICATIONS

POSITION	MAGNETS	DC RESISTANCE	POLARITY
NECK	ALNICO 2 UNBEVELED	7.3 - 8.1KΩ	NORTH
BRIDGE	ALNICO 2 UNBEVELED	7.2 - 7.8KΩ	NORTH