
STANDARD STRATOCASTER HH ® (014-9100-XXX)

PARTS LAYOUT

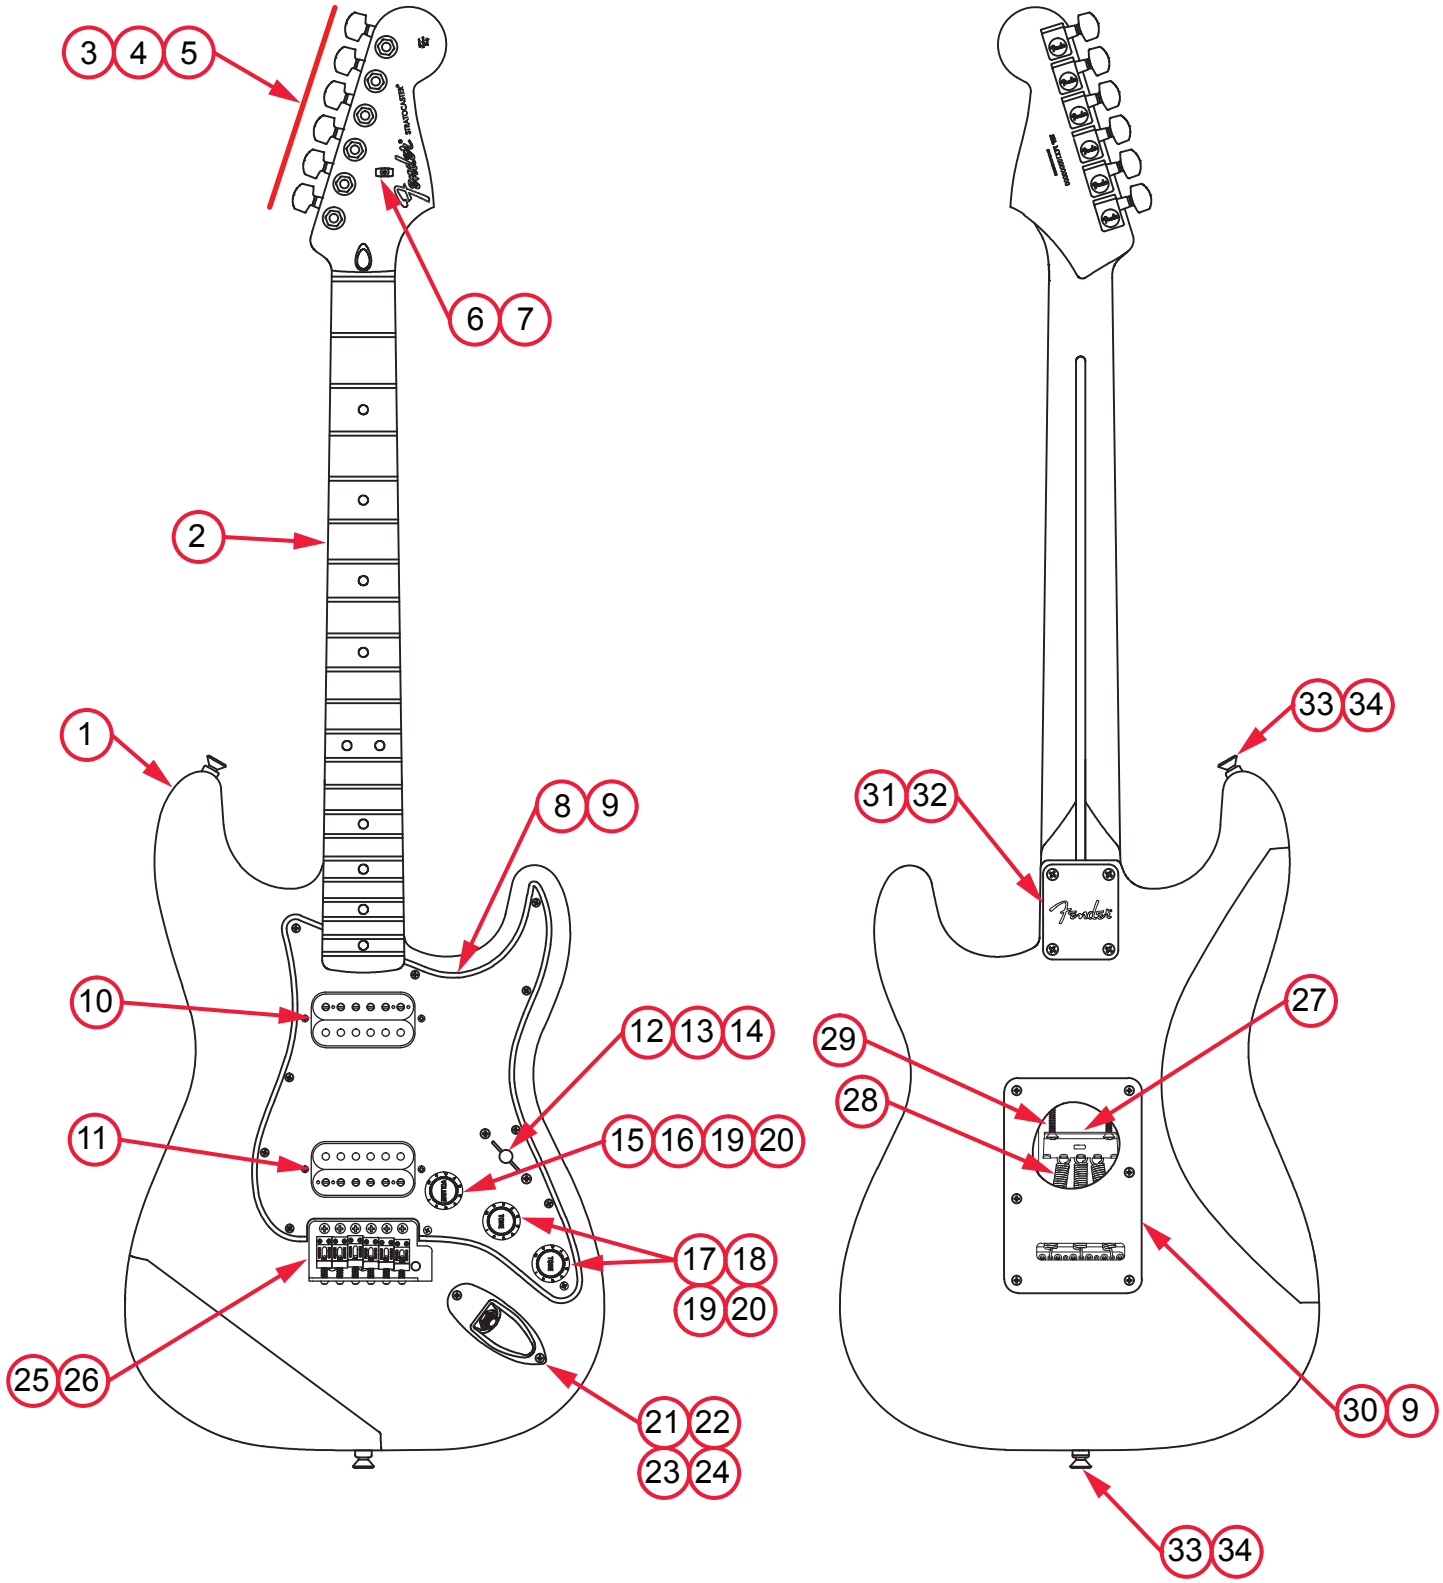

COPYRIGHT - 2015 - FENDER MUSICAL INSTRUMENTS CORPORATION

STANDARD STRATOCASTER HH ® (014-9100-XXX)


PARTS LIST

REF #	DESCRIPTION	PART NUMBER
1	BODY STD STRAT HH SOLID OLW B&P	0081221505
	BODY STD STRAT HH SOLID BLK B&P	0081221506
	BODY STD STRAT HH SOLID GST SLVR B&P	0081221581
2	NECK STD STRAT RW PAINT 2CT	0077945000
3	KEY GTR DUAL PIN MNT	0037429049
4	BUSHING KEYS	0058820049
5	WASHER KEY	0053106049
6	STRING GUIDE NICKEL	0994910000
7	SCRW SMAB 3x3/8 RHP	0011357049
8	PICKGUARD STD STRAT HH	7706880000
9	SCRW SMAB 4x1/2 OHP NI	0015578049
10	PICKUP BOOHEUNG ZEBRA BLK/CHR NK	7706968000
11	PICKUP BOOHEUNG ZEBRA BLK/CHR BRG	7706969000
12	SWITCH 3 WAY LVR W/MTL	0992041000
13	KNOB PICKUP SWCH BLK	0994939000
14	SCREW-MA 6-32X5/8 RH ZARTAN	09949250000
15	KNOB STRAT VOLUME BLACK	0991365000
16	CONTROL 500K VOL. 3/8 SPLIT	0990834000
17	KNOB STRAT TONE BLACK	0991363000
18	CONTROL 250K 10% TPR SPLIT	0990830000
19	NUT HEX 3/8-32x3/32	0016352049
20	WASHER LOCK INTL 3/8 X .687	0016436049
21	JACK PHONE 1/4 - OUTPUT	0047329049
22	WASHER LOCK INTL 3/8 X .687	0016436049
23	NUT HEX 3/8-32x3/32 TK NI	0016352049
24	FERRULE JACK CHR STD STR	0033023000
25	STD BRIDGE ASSY RH SGGB VTCRB	0071014049
26	SCRW-WD 6X 1 1/4 RHP ZARTAN CH	0021421049
27	SPRING, TREMOLO CLAW NICKEL	0050918000
28	SPRING TREMOLO TENSION, NI	0050922000
29	SCRW SMA 8x1-3/4 OHP NI	0015636049
30	BACK COVER STRAT SPRING BWB	0081420000
31	NECKPLATE, FENDER SPAGHETTI	7706847000
32	SCRW SMA 8x1-3/4 OHP NI	0015636049
33	BUTTON STRAP NI 0.156	0994915000
34	SCRW SMAB 5x1 OHP NI	0015610049

COPYRIGHT - 2015 - FENDER MUSICAL INSTRUMENTS CORPORATION

STANDARD STRATOCASTER HH ® (014-9100-XXX)


WIRING DIAGRAM

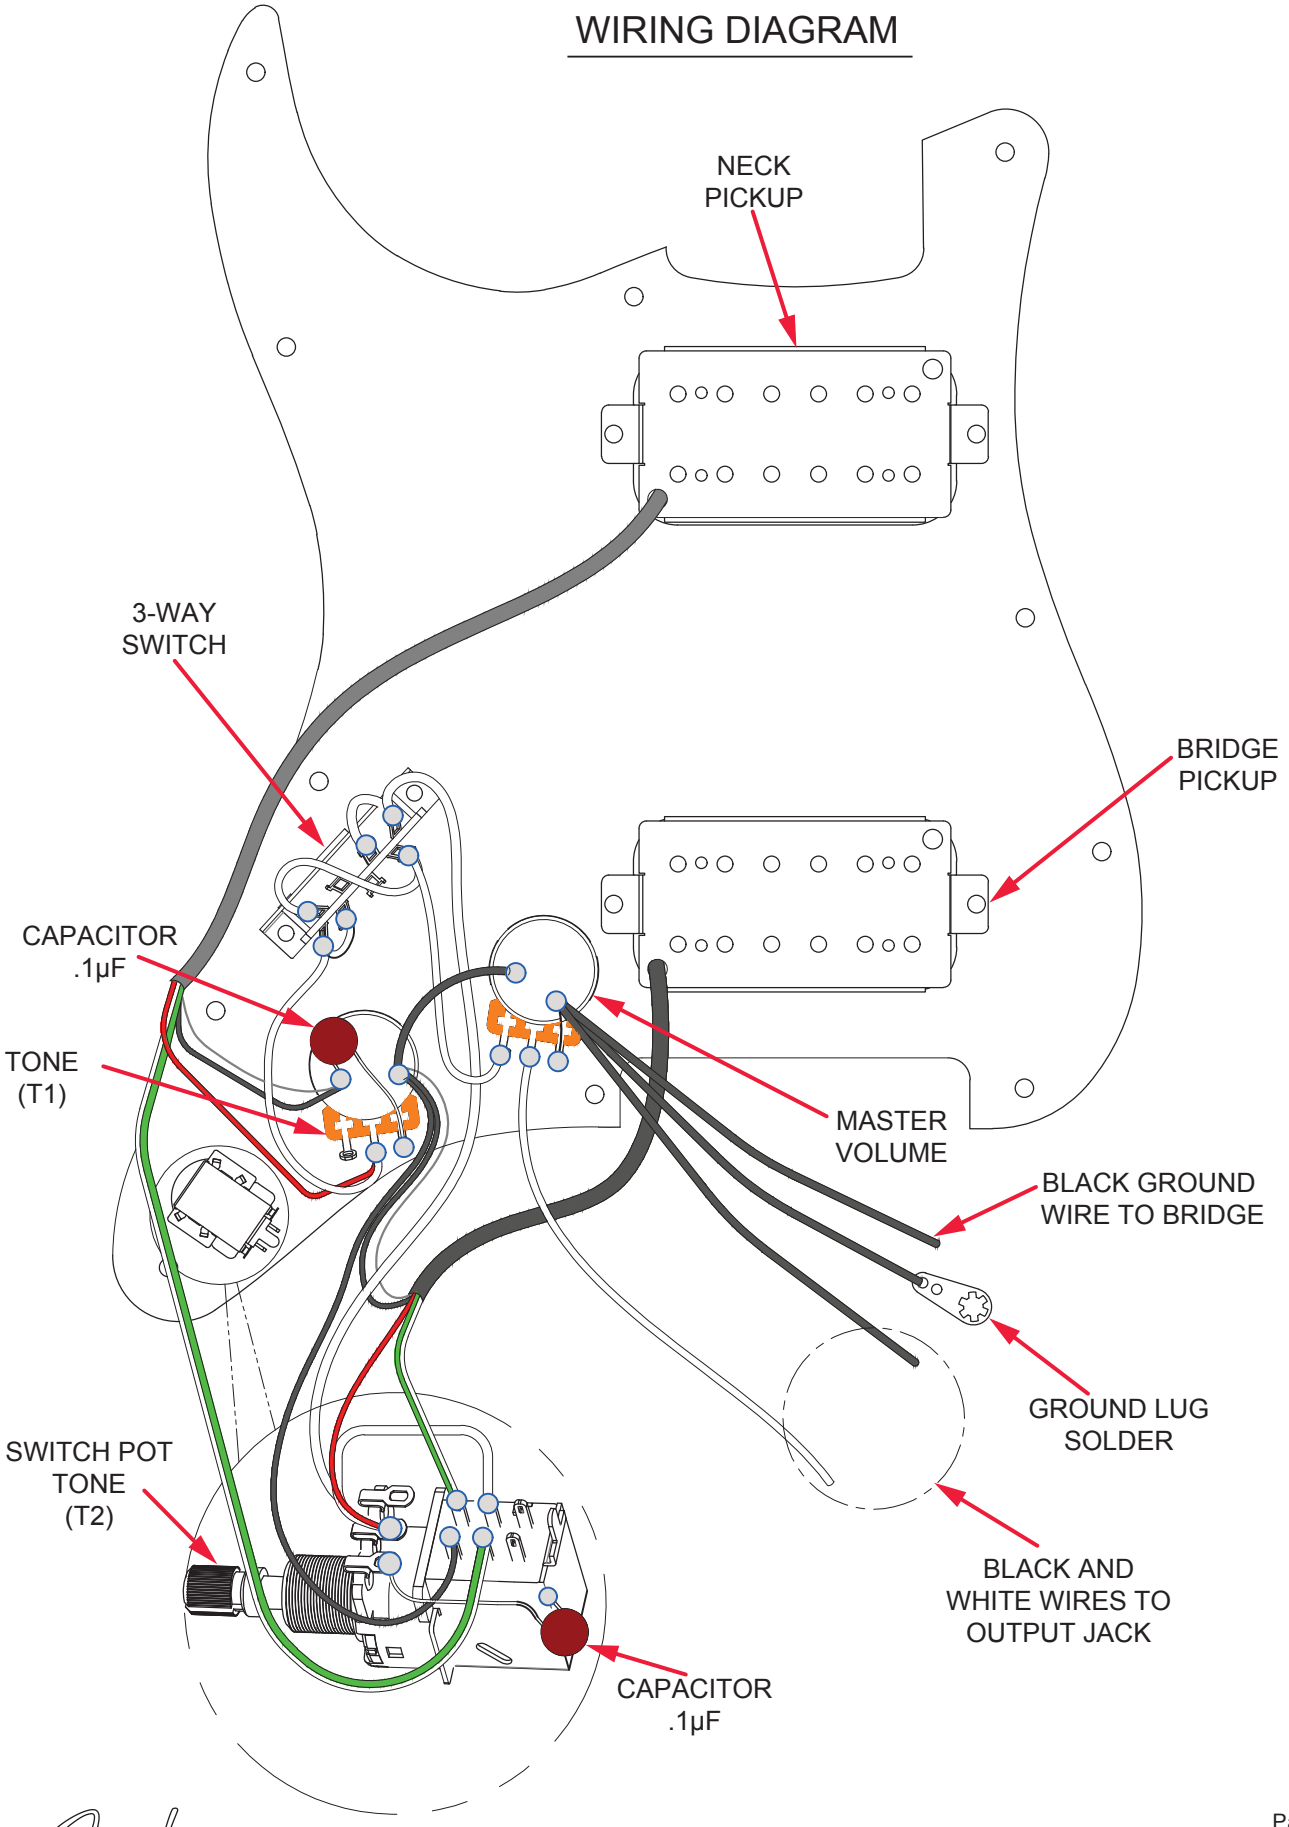

COPYRIGHT - 2015 - FENDER MUSICAL INSTRUMENTS CORPORATION

STANDARD STRATOCASTER HH ® (014-9100-XXX)

SWITCH AND CONTROL FUNCTION

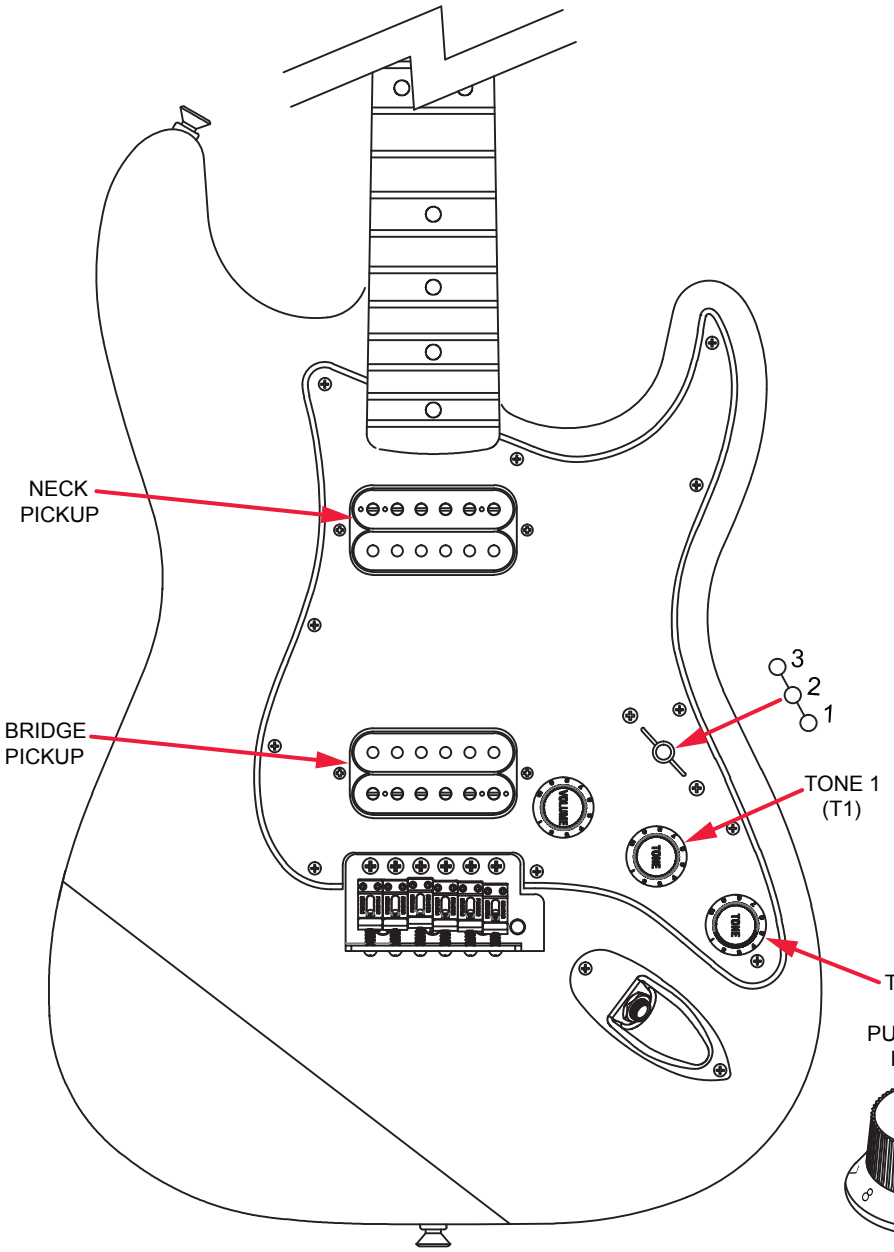

KNOB PUSH POSITION			
T1	T1 & T2	T2	TONE CONTROL
3	2	1	3 WAY SELECTOR POSITION
■	■	□	NECK PICKUP
□	■	□	BRIDGE PICKUP

KNOB PULL POSITION			
T1	T1 & T2	T2	TONE CONTROL
3	2	1	3 WAY SELECTOR POSITION
■	■	□	NECK PICKUP
□	■	□	BRIDGE PICKUP

■	PICKUP IS ON
□	PICKUP IS OFF

COPYRIGHT - 2015 - FENDER MUSICAL INSTRUMENTS CORPORATION