Strat Plus / Deluxe Strat Plus Wiring

10-7500/7502 | 10-9500/9502

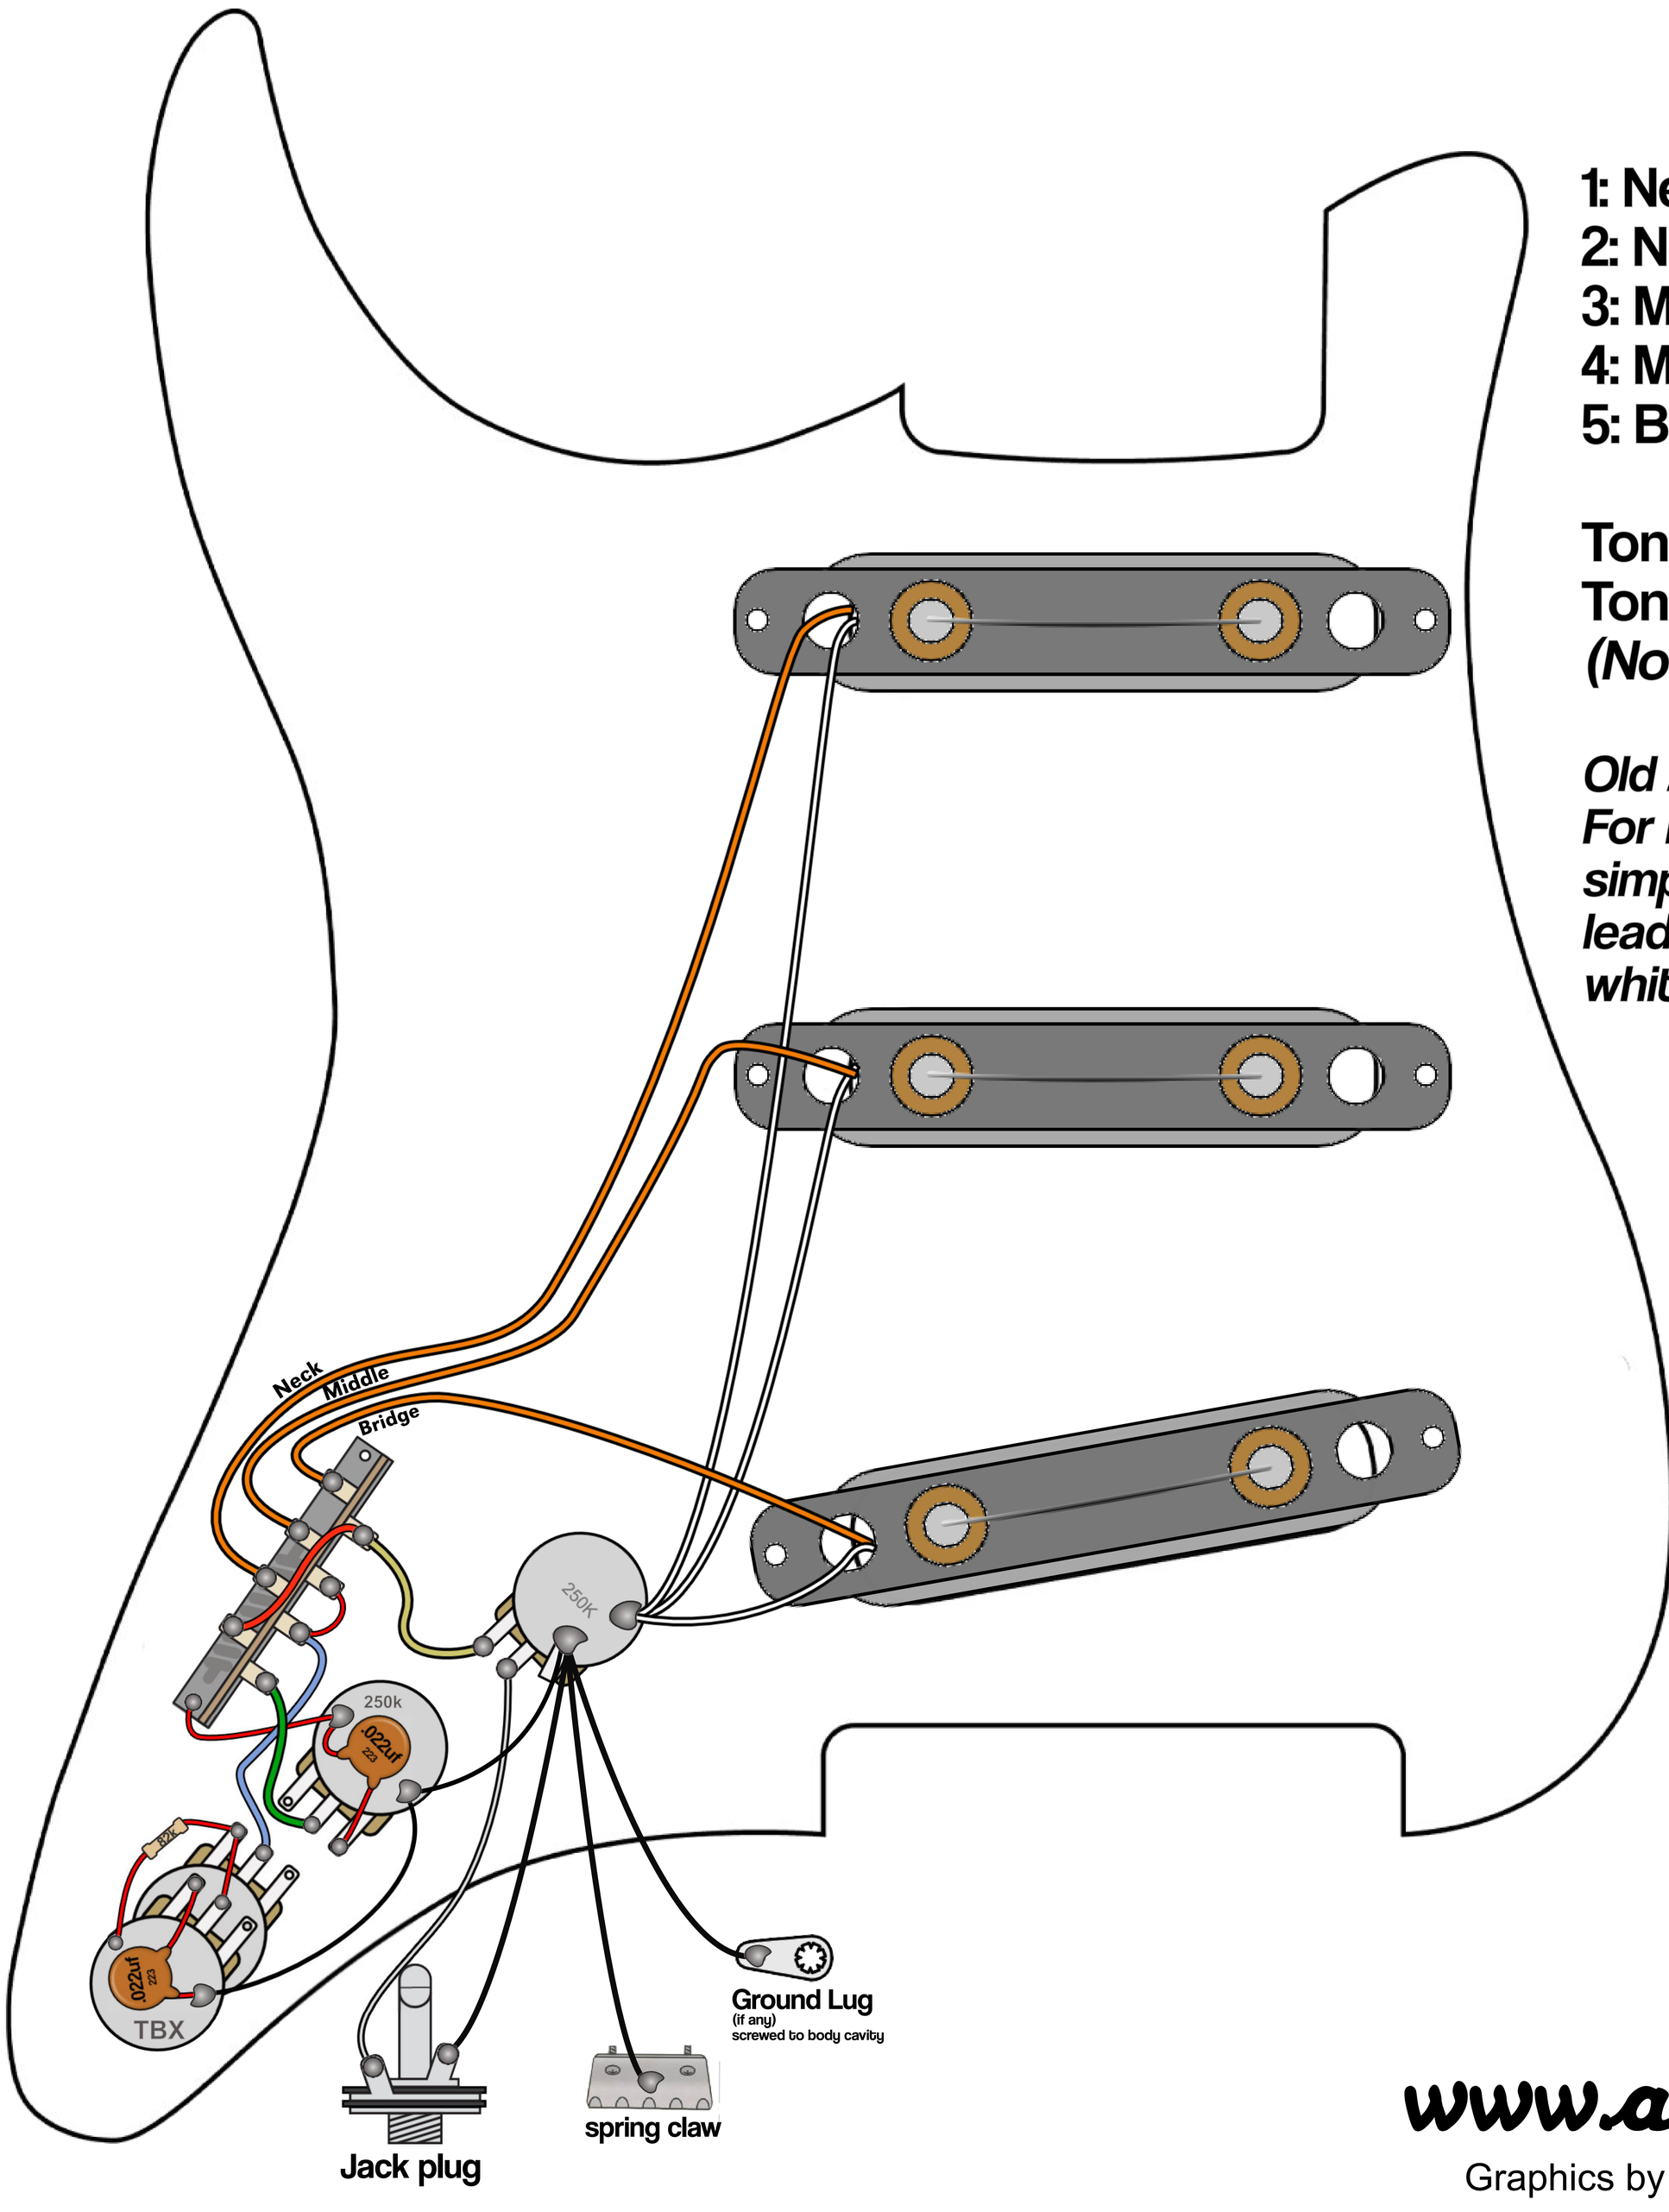

1: Neck
2: Neck + Middle
3: Middle
4: Middle + Bridge
5: Bridge

Tone 1: Neck PU
Tone 2: Middle PU
(No Tone for Bridge)

Old 2-lead Lace Sensors. For modern 3 lead Lace, simply hook up the green lead to Volume pot with white.

www.axefiles.com

Graphics by Gerry Haze. all rights reserved